



REPLACEMENT PARTS

Table with columns: Stock #, Description, Quantity. Lists various replacement parts like Ball Bearing, Antenna Tube, Battery Tray, etc.

HARDWARE

Table with columns: Stock #, Description, Quantity. Lists hardware items like Motor/Battery Connector, Graphite Battery Strap, Graphite Chassis brace, etc.

OPTIONALS


Table with columns: Stock #, Description, Quantity. Lists optional parts like 1100mah NiMH 6-Cell Battery, Graphite Battery Connector, etc.

To order replacement parts or to send your model in for repairs covered under warranty, you should send your model to DuraTrax's authorized U.S. repair facility.

Hobby Services
3002 N. Apollo Drive, Suite 1, Channahon, Illinois 61822
Ain. Service Department
Phone: (217) 398-0007
9:00 a.m. - 5:00 p.m. Central Time M-F
E-Mail: hobby.services@duratrax.com

\*Indicates Stress-Tech™ part

Hardware Chart

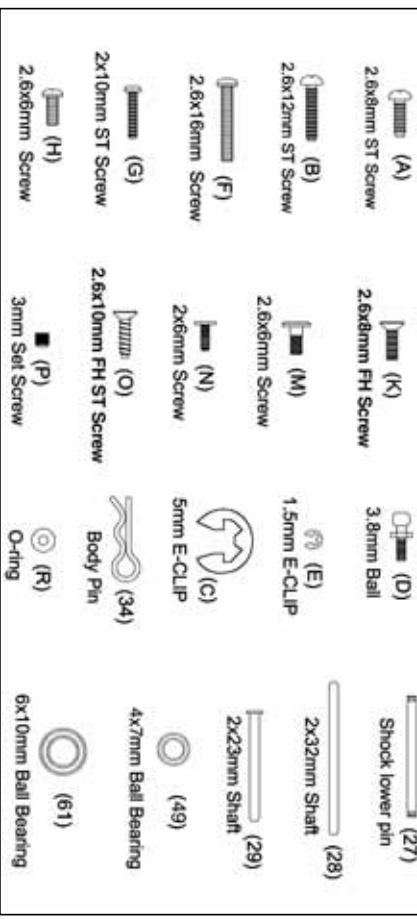

This parts list shows the key number, part description and parts bag stock number for ordering. If there are multiple stock numbers listed, that particular part is available in several places. Refer to the replacement parts bag list for the contents of each parts bag.

Main parts list table with columns: #, Item Description, Stock #, and corresponding callout letter (A-S).

# Mini QUAKE SE

