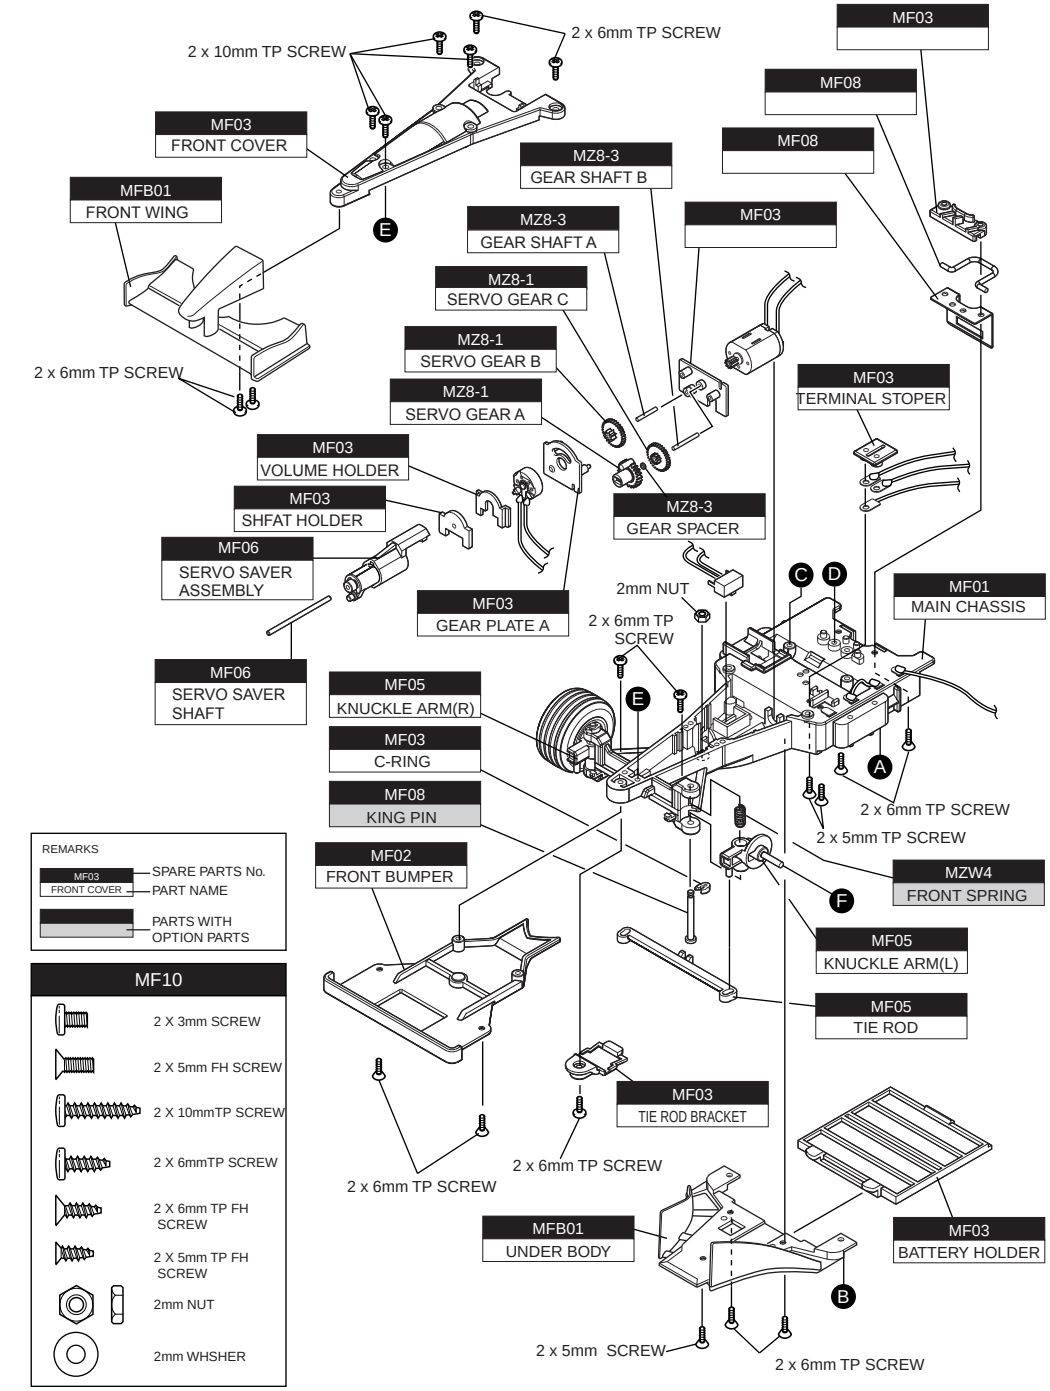
2 x 10mm TP SCREW
2 x 6mm TP SCREW
MF03
MF08
MF03
FRONT COVER
MF08
MZ8-3
GEAR SHAFT B
MFB01
FRONT WING
MZ8-3
GEAR SHAFT A
MF03
MZ8-1
SERVO GEAR C
MZ8-1
SERVO GEAR B
2 x 6mm TP SCREW
MZ8-1
SERVO GEAR A
MF03
TERMINAL STOPER
MF03
VOLUME HOLDER
MF03
SHFAT HOLDER
MZ8-3
GEAR SPACER
MF06
SERVO SAVER ASSEMBLY
MF03
GEAR PLATE A
2mm NUT
2 x 6mm TP SCREW
MF01
MAIN CHASSIS
MF06
SERVO SAVER SHAFT
MF05
KNUCKLE ARM(R)
MF03
C-RING
MF08
KING PIN
2 x 6mm TP SCREW
2 x 5mm TP SCREW
MZW4
FRONT SPRING
MF02
FRONT BUMPER
MF05
KNUCKLE ARM(L)
MF05
TIE ROD
MF03
TIE RODBRACKET
2 x 6mm TP SCREW
2 x 6mm TP SCREW
MFB01
UNDER BODY
MF03
BATTERY HOLDER
2 x 5mm SCREW
2 x 6mm TP SCREW
REMARKS
MF03
FRONT COVER
SPARE PARTS No.
PART NAME
PARTS WITH OPTION PARTS
MF10
2 X 3mm SCREW
2 X 5mm FH SCREW
2 X 10mmTP SCREW
2 X 6mmTP SCREW
2 X 6mm TP FH SCREW
2 X 5mm TP FH SCREW
2mm NUT
2mm WHSHER

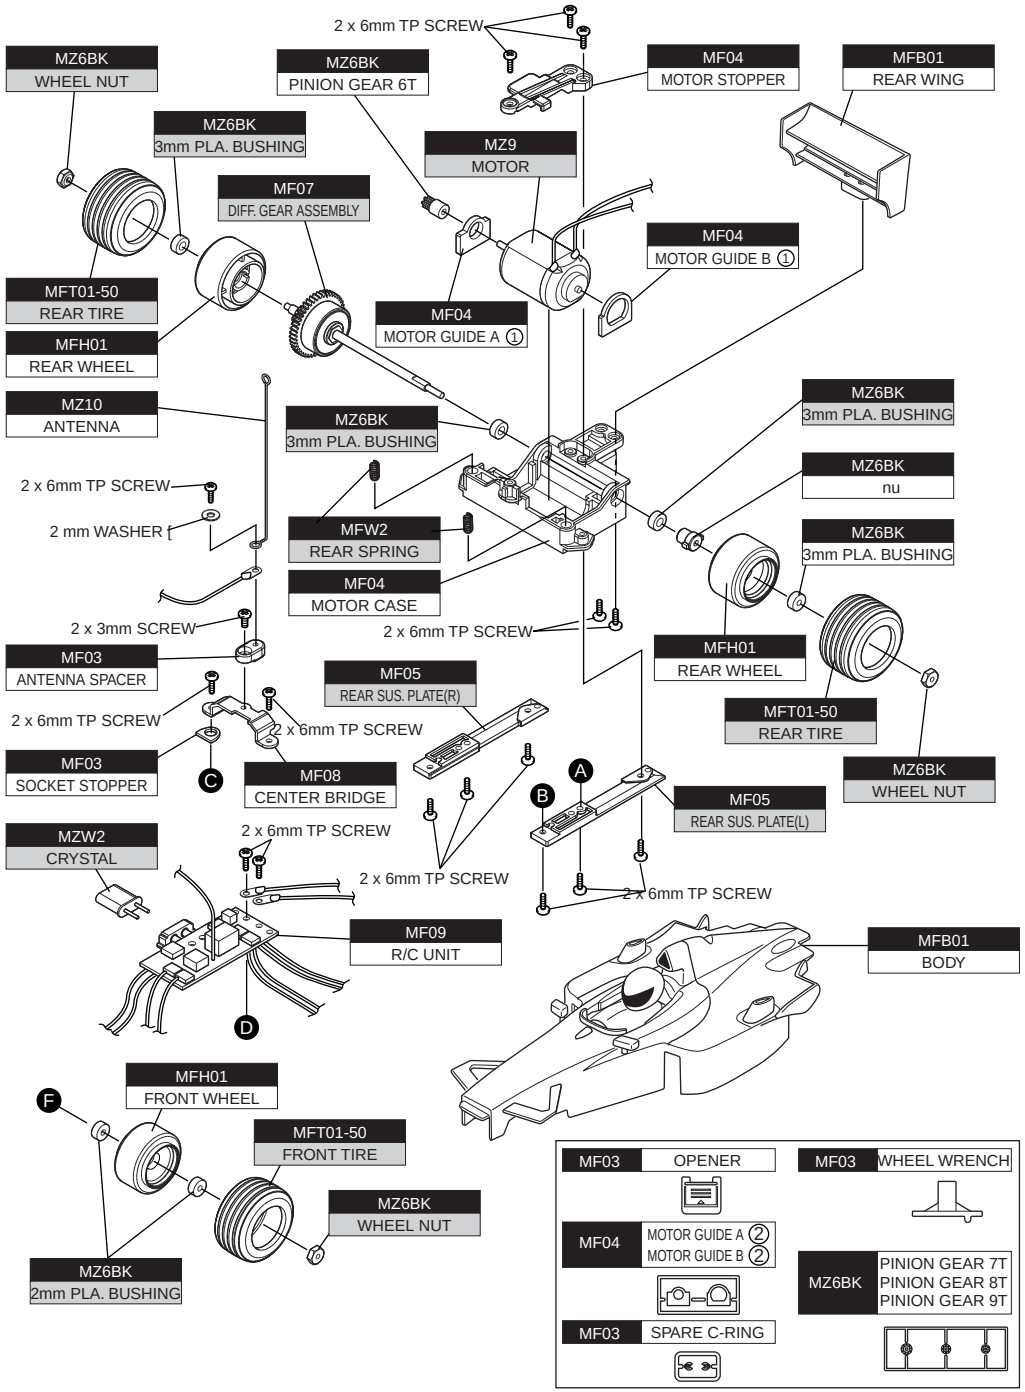
2 x 6mm TP SCREW
MZ6BK
WHEEL NUT
MZ6BK
PINION GEAR 6T
MF04
MOTOR STOPPER
MFB01
REAR WING
MZ6BK
3mm PLA. BUSHING
MZ9
MOTOR
MF07
DIFF. GEAR ASSEMBLY
MF04
MOTOR GUIDE B ①
MFT01-50
REAR TIRE
MFH01
REAR WHEEL
MF04
MOTOR GUIDE A ①
MZ10
ANTENNA
MZ6BK
3mm PLA. BUSHING
MZ6BK
3mm PLA. BUSHING
2 x 6mm TP SCREW
MZ6BK
nu
2 mm WASHER
MFW2
REAR SPRING
MZ6BK
3mm PLA. BUSHING
MF04
MOTOR CASE
2 x 3mm SCREW
2 x 6mm TP SCREW
MFH01
REAR WHEEL
MF03
ANTENNA SPACER
MF05
REAR SUS. PLATE(R)
2 x 6mm TP SCREW
2 x 6mm TP SCREW
MFT01-50
REAR TIRE
MF03
SOCKET STOPPER
MF08
CENTER BRIDGE
MZ6BK
WHEEL NUT
MF05
REAR SUS. PLATE(L)
MZW2
CRYSTAL
2 x 6mm TP SCREW
2 x 6mm TP SCREW
2 x 6mm TP SCREW
MF09
R/C UNIT
MFB01
BODY
MFH01
FRONT WHEEL
MFT01-50
FRONT TIRE
MZ6BK
WHEEL NUT
MZ6BK
2mm PLA. BUSHING
MF03 OPENER
MF03 WHEEL WRENCH
MF04 MOTOR GUIDE A ②
MOTOR GUIDE B ②
MZ6BK PINION GEAR 7T
PINION GEAR 8T
PINION GEAR 9T
MF03 SPARE C-RING