

# **XRAY T1**

## **FACTORY KIT**

**1/10 LUXURY ELECTRIC TOURING CAR**



**best** car action  
award  
craftsmanship

**1/10**

**INSTRUCTION MANUAL**

# CONGRATULATIONS

The new XRAY T1 Factory Kit is the next evolution of the hugely-successful XRAY T1 Evo2 1/10-scale on-road electric touring car. Based on real-world racing results and extensive testing by numerous XRAY factory team drivers around the world, the T1 Factory Kit combines all of the best high-performance components into a single package.

The T1 Factory Kit features the popular, efficient C-hub suspension using new "Euro style" suspension components such as shorter suspension arms and updated bulkheads. It also features many new updated and lightened components to reduce unnecessary weight and rotating mass without compromising strength and long life. All of these components combine to make the highest-performance, best handling electric touring car in the world.

## R/C & BUILDING TIPS

- Read and fully understand the instruction manual before building.
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.
- Clear a work area for assembling the kit.
- Work on a light-colored towel so any dropped parts are easy to find.
- Only open bags of parts for the assembly section you are building; do not open parts bags before required.
- Make sure all screws are tight, and check them periodically. Make sure the chassis screws do not protrude below the chassis.
- For best performance, it is very important to ensure the free movement of all parts.

The T1 Factory Kit is the epitome of high-performance engineering and was designed for top competition races. The design is focused on the blending of extraordinary materials with racecar lineage to offer a responsive ride, luxurious elegant design, finest quality, and best track performance. We gave the T1 Factory Kit the highest number of adjustments possible to get the most performance out of any track condition.

We have made every effort to make these instructions as easy to understand as possible. However, if you have any difficulties, problems, or questions, please do not hesitate to contact the XRAY support team at [support@teamxray.com](mailto:support@teamxray.com). Also, please visit our web site at [www.teamxray.com](http://www.teamxray.com). Our official web site contains all the latest updates, hot setup information, lists of hop-up parts, and many other goodies. We pride ourselves on taking excellent care of our customers.

- Tap or pre-thread composite parts when threading screws.
- Self-tapping screws cut threads into the parts when tightened. Do not use excessive force when tightening self-tapping screws, or you may strip out the thread in the plastic. We recommend you stop tightening a screw when you feel some resistance.
- Use medium-grade (blue) threadlock on screws that thread into metal parts.

Please support your local hobby shop, and ask them for any advice. We at XRAY Model Racing Cars support all local hobby dealers. Therefore we ask you, when possible, to purchase XRAY products at your hobby dealer and give them your support as we do. If you have difficulty finding XRAY products, please check out [www.teamxray.com](http://www.teamxray.com) to get advice, or contact us via e-mail at [support@teamxray.com](mailto:support@teamxray.com), or contact the XRAY distributor in your country.

## ADDITIONAL ITEMS REQUIRED:

Radio system (transmitter and receiver), steering servo, speed controller, motor, battery pack (6-cell), pinion gear, battery charger, 1/10-scale bodyshell (190 mm), tires, inserts, double-sided tape, CA glue, bearing oil, medium-grade (blue) threadlock.



## TOOLS REQUIRED:

Cutting Pliers, Needlenose Pliers, Snap Ring Pliers, Allen Wrenches (1.5 mm, 2.0 mm, 2.5 mm, and 3.0 mm), Hobby Knife, Caster Clip Removal Tool, Turnbuckle Wrench, Shock Assembly Tool, Vernier Calipers (digital recommended), Soldering Iron and Solder. For ease of assembly, we strongly recommend using high-quality HUDY tools. For more information, see [www.hudy.net](http://www.hudy.net).

In line with our policy of continuous product development, the exact specifications of the kit may vary. In the unlikely event of any problems with your new kit, you should contact the model shop where you purchased it, quoting the part number. We reserve all rights to change any specification without prior notice. All rights reserved.

# CONTENTS

<b>0. KIT</b>	2	<b>6. STEERING</b>	13-14
<b>1. REAR DIFFERENTIAL &amp; FRONT AXLE</b>	3-4	<b>7. SHOCK ABSORBERS</b>	15-16
<b>2. REAR TRANSMISSION</b>	5-6	<b>8. REAR FINAL ASSEMBLY</b>	17
<b>3. REAR SUSPENSION</b>	7-8	<b>FRONT FINAL ASSEMBLY</b>	18
<b>4. FRONT TRANSMISSION</b>	9-10	<b>9. FINAL ASSEMBLY</b>	19
<b>5. FRONT SUSPENSION</b>	11-12	<b>ACCESSORY ASSEMBLY</b>	20-21

## BEFORE YOU START

At the beginning of each section is an exploded view of the parts to be assembled. There is also a list of all the parts and part numbers that are related to the assembly of that section.


The part descriptions are color-coded to make it easier for you to identify the source of a part. Here are what the different colors mean:

**STYLE A** - indicates parts that are included in the bag marked for the section.

**STYLE B** - indicates parts that were set aside in Section 0.

**STYLE C** - indicates parts that are already assembled from previous steps.

## 0. KIT (FACTORY PREASSEMBLED)

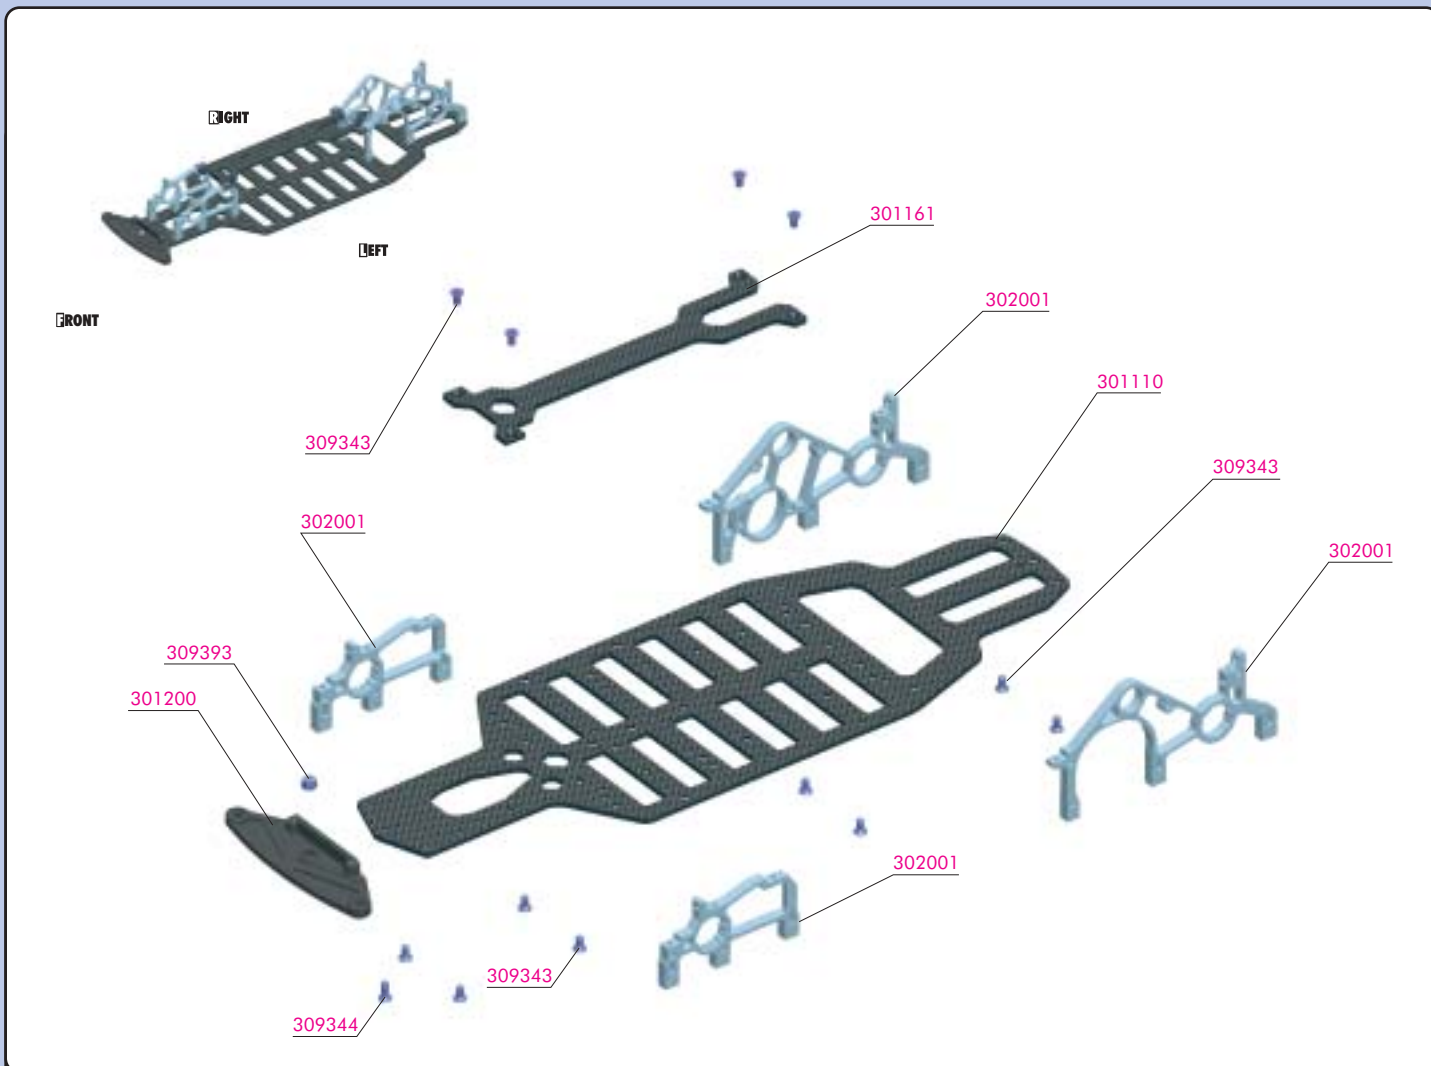


### KIT

30 1110	6-CELL CHASSIS - 2.5 MM GRAPHITE - CNC MACHINED	30 9343	HEX SCREW SFH M3x6 (10)
30 1161	UPPER DECK EVO 2 - 2.5 MM GRAPHITE - CNC MACHINED	30 9344	HEX SCREW SFH M3x8 (10)
30 1200	COMPOSITE BUMPER	30 9393	NUT M3 (10)
30 2001	ALU SUSP. ADJUSTABLE BULKHEADS - (FACTORY KIT) (4)		

The XRAY T1 Factory Kit comes partially preassembled. Before starting assembly, disassemble the chassis parts, noting the position and orientation of the parts, particularly the bulkheads. Keep the parts, including the screw hardware, close at hand. In the assembly steps that follow, each section begins with a parts list. Parts indicated with style B are from the previously disassembled chassis parts in section 0.


# 1. REAR DIFFERENTIAL & FRONT AXLE

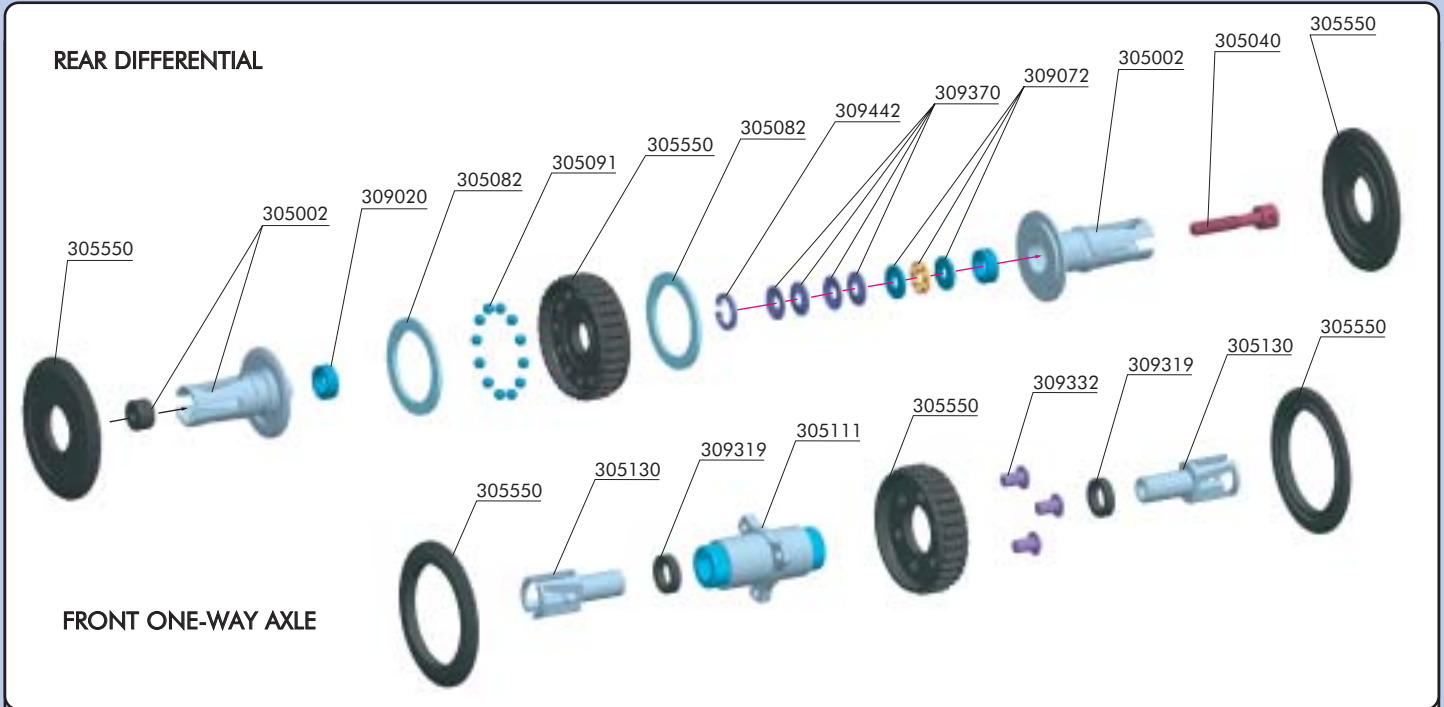


**BAG 01**

30 5002	BALL DIFF. WITH LABYRINTH COVERS™ - (FACTORY KIT)	30 9020	BALL-BEARING MR85ZZ 5x8x2.5 (2)
30 5040	SCREW FOR EXTERNAL DIFF ADJUSTMENT - SPRING STEEL	30 9072	CARBIDE BALL-BEARING AXIAL F3-8 3 x 8 x 3.5 - PRO
30 5082	DIFF WASHER 17x23x1 (2)	30 9319	UNIVERSAL SET OF PLASTIC SHIMS
30 5091	CARBIDE BALL 2.4 MM FOR BALL DIFFERENTIAL (12)	30 9332	HEX SCREW SH M3x5 (10)
30 5111	FRONT AXLE PRO WITH ONE-WAY BEARINGS	30 9370	CONE WASHER ST 3x8x0.5 (10)
30 5130	INNER DRIVESHAFT ADAPTER - SPRING STEEL (2)	30 9442	CH-CLIP 8 (10)
30 5550	LOW RATIO PULLEY SET (RATIO 1.77)		


Properly functioning differentials and axles are extremely important to the performance of the car. It is imperative they operate smoothly after assembly or rebuilding, and after every run. The T1 Factory Kit uses an adjustable rear ball differential and a front one-way axle. The rear differential is preassembled at the factory; follow the procedures in this section if you need to clean or rebuild the rear differential.



309442  
C 8




309370  
ST 3x8




309072  
BA 3x8

**The rear differential is preassembled at the factory.**  
Follow these steps if you need to clean or rebuild the long diff shaft assembly.

1. Insert the smaller of the two thrust washers into the long diff shaft.
2. Apply grease to the balls in the thrust ball cage; coat each side. Insert the thrust ball cage into the long diff shaft.
3. Place the larger thrust washer into the long diff shaft.
4. Insert four cone washers as shown in the detail image.
5. Insert a #309442 (C 8) clip into the groove inside the long diff shaft. Use snap-ring pliers for easy assembly.

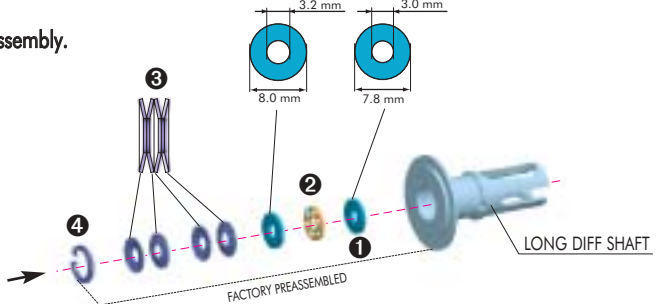





309020  
BB 5x8

**The rear differential is preassembled at the factory.**  
Follow these steps if you need to clean or rebuild the short diff shaft assembly.

1. If you need to replace the diff locknut, push it out from the opposite side with the tip of a wrench. Insert a new one into the short diff shaft.
2. Place a #309020 (BB 5x8) ball-bearing on the short center stub of the short diff shaft.
3. Put a very thin coat of grease on the side of a #305082 diff washer, and place it on the short diff shaft. The washer should seat centered on the short diff shaft, and the layer of grease will hold it in place.
4. Press the #305550 diff pulley onto the ball-bearing.

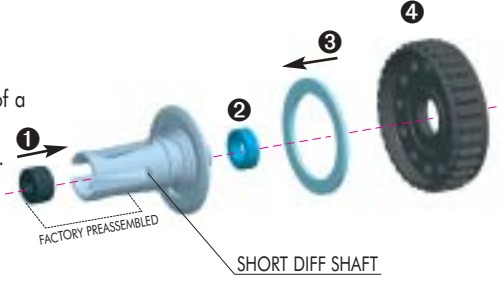




305091  
B 2.4

**The rear differential is preassembled at the factory.**  
Follow these steps if you need to clean or rebuild the diff pulley or diff balls.

1. Apply a little bit of grease into each of the 12 holes in the diff pulley.
2. Place the twelve #305091 carbide diff balls into the diff pulley holes.




# REAR DIFFERENTIAL & FRONT AXLE



309020  
BB 5x8

The rear differential is preassembled at the factory. Follow these steps if you need to clean or rebuild the rear differential.

1. Hold the short diff shaft with the installed pulley facing up. Place a #309020 (BB 5x8) ball-bearing on the center stub, atop the other bearing.
2. Put a very thin coat of grease on the side of a #305082 diff washer, and place it on the long diff shaft. The washer should seat centered on the long diff shaft, and the layer of grease will hold it in place.
3. Insert the #305040 diff screw into the top of the long diff shaft as shown, and align the holes in the screw with the holes in the diff shaft. Slide a small Allen wrench through the aligned holes in both pieces. The end of the diff screw should protrude from the center of the diff shaft.
4. Hold the lower diff half upward as shown, and lower the long diff shaft with the screw pointing down onto the short diff shaft. Carefully thread the diff screw into the center of the short diff shaft. Keep tightening until the diff washer just touches the diff balls, and then tighten another 1/4 turn or until you feel some resistance. Remove the Allen wrench.

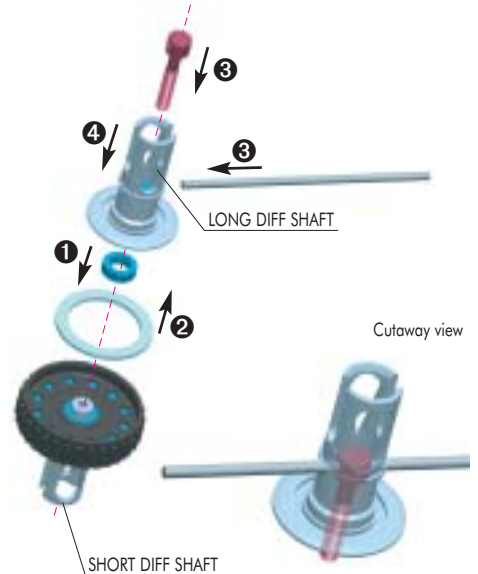

**ALWAYS HOLD THE DIFFERENTIAL VERTICAL DURING ASSEMBLY, SO THE PARTS STAY IN ALIGNMENT AND THE DIFF BALLS DO NOT FALL OUT.**

### To check the differential:


Slide two wrenches into the slots on both sides of the diff shafts. Hold both wrenches in one hand and try to turn the pulley; it should take some force to get the pulley to slip between the two outdrives. Then remove both wrenches and rotate one of the diff shafts while holding the pulley stationary. The action should feel smooth.

### To tighten the differential:

Insert a small Allen wrench into the aligned holes in the setscrew and long diff shaft. Turn the long diff shaft 1/16 to 1/8 of a turn clockwise to tighten. Remove the Allen wrench and recheck the diff.

### To loosen the differential:


Same as tightening the differential, except turn the long diff shaft counter-clockwise to loosen.

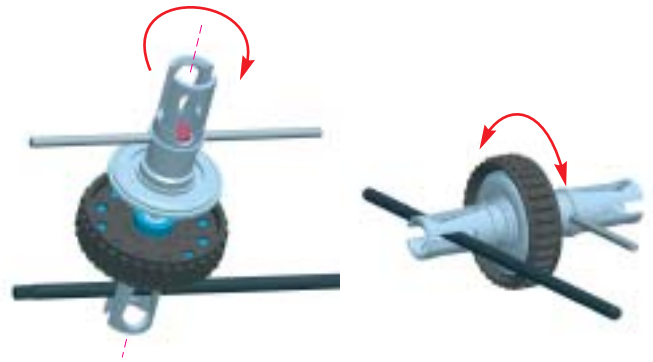

**DO NOT TIGHTEN THE DIFF COMPLETELY THE DIFF MUST BE BROKEN IN PROPERLY !**

**IMPORTANT:** When you build the differential, do not tighten it fully initially; the differential needs to be broken in properly. When you build the diff tighten it very gently. When you put the diff in the car and complete the assembly, run the car for a few minutes, tighten the diff a little bit, and then recheck the diff. Repeat this process several times until you have the diff tightened to the point you want it. Final adjustments should ALWAYS be made with the diff in the car and on the track.


Slide two Labyrinth Dust Covers onto the ends of the diff shafts; the smooth sides of the covers face outward, away from the pulley. Squeeze the covers firmly until they both "snap" onto pulley; it may take a bit of effort to do this. Once snapped on, the covers seat perfectly.

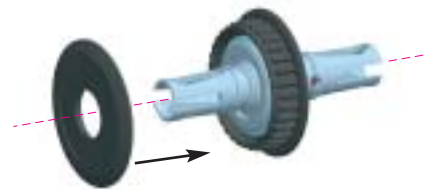

309332  
SH M3x5




309319  
SHIM 6x9x2

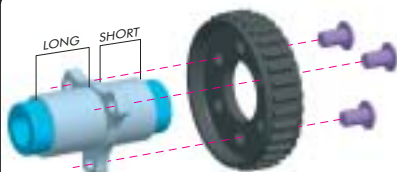

Attach the #305550 pulley to the #305111 front axle using three #309332 (SH M3x5) screws.


Be sure to mount the pulley on the SHORTER side of the front axle.

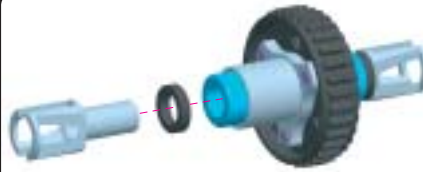

Slide #309319 spacer onto #305130 outdrive shaft.

Apply one-way lube to outdrive shaft, then slide outdrive into end of front axle.


Repeat for other side.

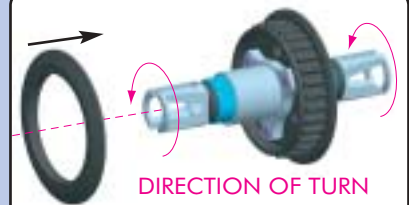

Slide two pulley covers onto the ends of the front axle. Squeeze the covers firmly until they both "snap" onto the pulley; it may take a bit of effort to do this.

Verify that the outdrives rotate in the direction shown.

## 2. REAR TRANSMISSION

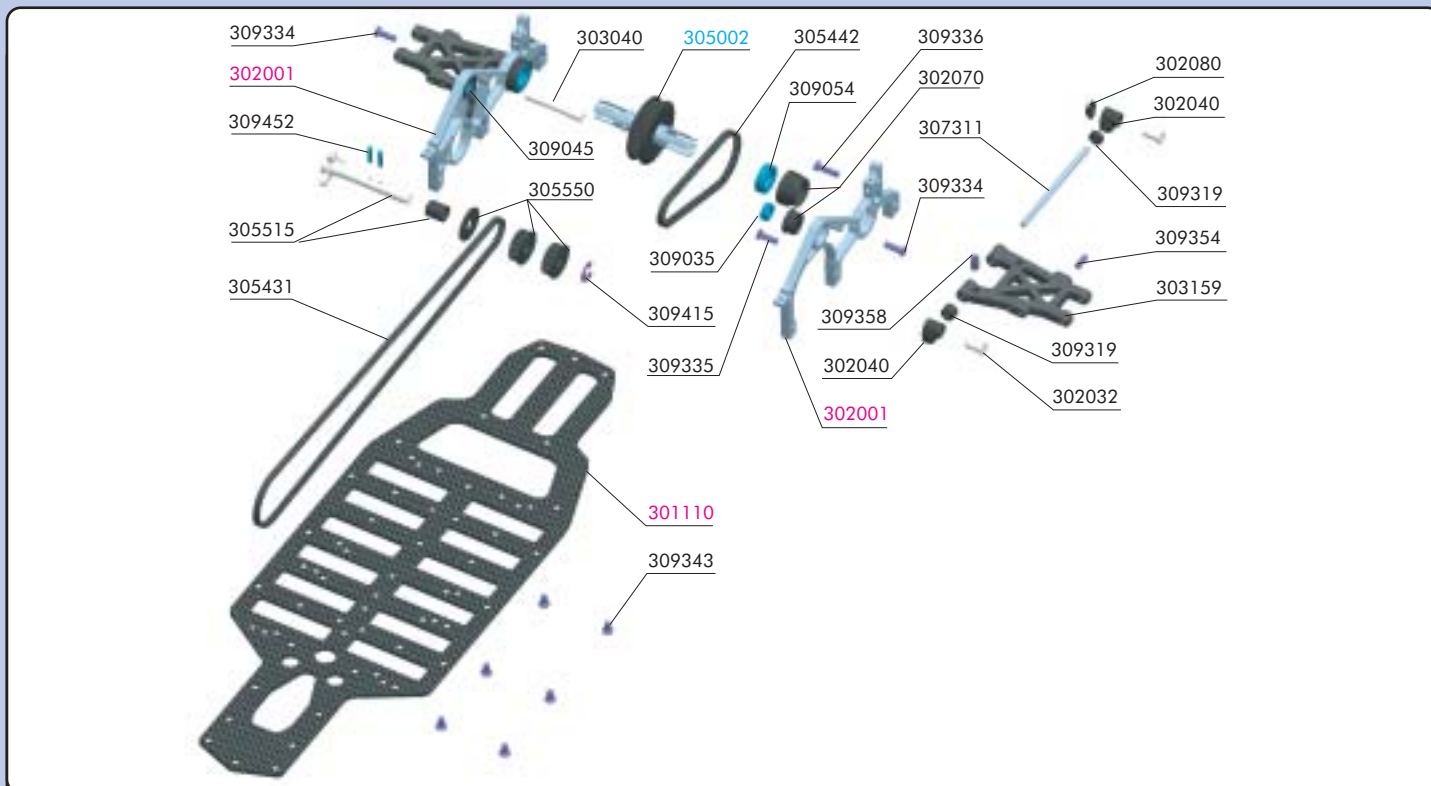

**BAG  
02**

30 2032	ALU NUT FOR SUSP PIVOT PIN (2)
30 2040	LOWER SUSPENSION HOLDER ( SET 2+1+1)
30 2070	ECCENTRIC NYLON HUB FOR BULKHEAD + COVERS (4+2)
30 2080	CASTER CLIPS SET 4+3+2+1 MM (2)
30 3040	ALU REAR BULKHEAD BRACE
30 3159	SHORT SUSPENSION ARM - REAR LOWER - C-HUB
30 5431	HIGH-PERFORMANCE KEVLAR DRIVE BELT FRONT 3 x 507 MM
30 5442	HIGH-PERFORMANCE KEVLAR DRIVE BELT REAR 3 x 180 MM
30 5515	ALU SOLID LAYSHAFT PRO
30 5550	LOW RATIO PULLEY SET (RATIO 1.77)
30 7311	REAR WISHBONE PIVOT PIN BOTTOM - S. STEEL - C-HUB (2)
30 9035	HIGH-SPEED BALL-BEARING MR95ZZ 5 x 9 x 3 BLUE COVERED (2)
30 9045	HIGH-SPEED BALL-BEARING MR106ZZ 6 x 10 x 3 BLUE COVERED (2)
30 9054	HIGH-SPEED BALL-BEARING 10 x 15 x 4 BLUE COVERED (2)
30 9319	UNIVERSAL SET OF PLASTIC SHIMS

30 9334	HEX SCREW SH M3x8 (10)
30 9335	HEX SCREW SH M3x10 (10)
30 9336	HEX SCREW SH M3x12 (10)
30 9343	HEX SCREW SFH M3x6 (10)
30 9354	HEX SCREW SB M3x8 (10)
30 9358	HEX SCREW SB M4x8 (10)
30 9415	E-CLIP 5 (10)
30 9452	PIN 2x10 (10)

**30 1110** 6-CELL CHASSIS - 2.5 MM GRAPHITE - CNC MACHINED  
**30 2001** ALU SUSP. ADJUSTABLE BULKHEADS - (FACTORY KIT) (4)

**30 5002** BALL DIFF. WITH LABYRINTH COVERS™ - (FACTORY KIT)



**1.** Press the plastic holders for the small ball-bearings into the rear bulkheads. The flange on each holder goes toward the INSIDE of the bulkhead.

The holder with a hole through it goes into the RIGHT bulkhead. The holder without a hole through it goes into the LEFT bulkhead.

**2.** Press a #309045 (BB 6x10) ball-bearing into the open plastic holder (with hole) in the RIGHT bulkhead. Press a #309035 (BB 5x9) ball-bearing into the closed plastic holder (without hole) in the LEFT bulkhead.

**3.** Press the large eccentric ball-bearing holders into the bulkheads. Align the tab of each holder with the middle notch in each bulkhead as shown. It may take some effort to press the large holders into the bulkheads.

**4.** Press #309054 (BB 10x15) ball-bearings into the eccentric holders.

Make sure all bearings turn freely and easily.



### BELT TENSION ADJUSTMENT

#### To tighten rear belt:


Rotate rear nylon hubs in arrow direction (A)

#### To loosen rear belt:


Rotate rear nylon hubs in arrow direction (B)

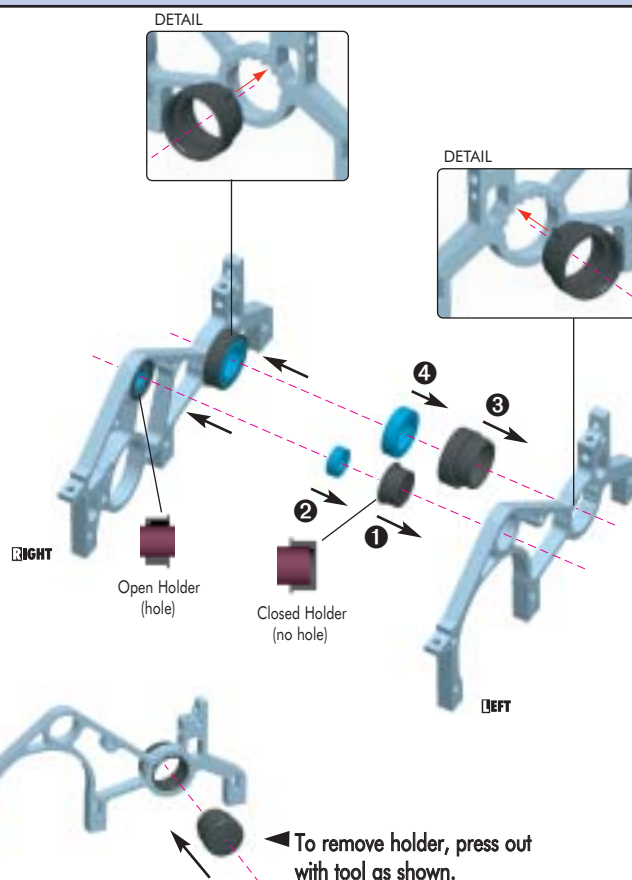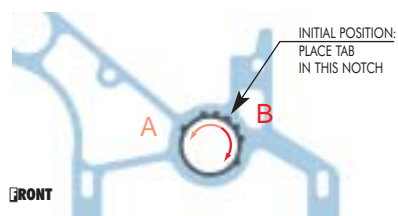



**309452**  
P 2x10



**309415**  
C5




1. Insert the layshaft through the upper ball-bearing in the right rear bulkhead until the shoulder on the layshaft rests against the outside of the bearing.
2. Slide the collar over the layshaft, with the tapered end toward the bearing.
3. Slide the pulley shim over the layshaft.
4. Press a #309452 (P 2x10) pin into the layshaft hole closest to the pulley shim.
5. Slide an 18T pulley onto the layshaft, and seat it over the pin.
6. Press the other #309452 (P 2x10) pin into the other layshaft hole.
7. Slide the other 18T pulley onto the layshaft, and seat it over the second pin.
8. Snap a #309415 (C5) E-clip into the groove in the layshaft.

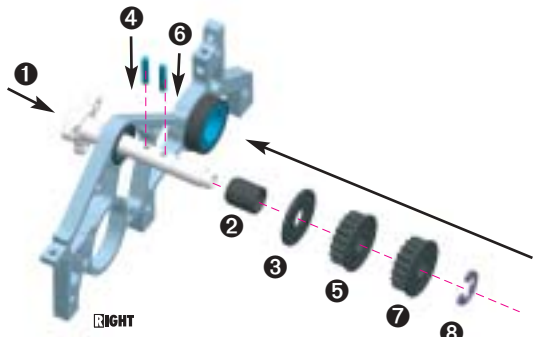



Cutaway view

**309358**  
SB M4x8




**309354**  
SB M3x8




1. Thread #309358 (SB M4x8) screws into the holes at the front of each rear lower arm. The screws must protrude 2.5 mm below the arms, and must be accessible from the tops of the arms for adjustment.
2. Thread one #309354 (SB M3x8) setscrew into the hole at the rear of the arm as shown. The setscrew must protrude 3.0 mm.


**Repeat for the other arm, making sure to mirror the screw placement.**

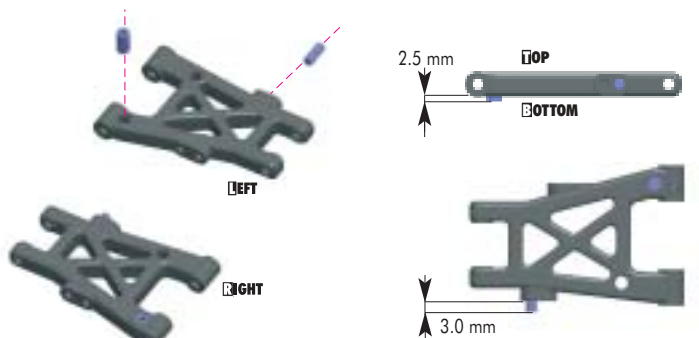


**309335**  
SH M3x10




**309319**  
SHIM 3x7x6



**309319**  
SHIM 3x7x3




**309336**  
SH M3x12




1. Mount a lower suspension holder to the outside front of the rear bulkhead, using a #309335 (SH M3x10) screw and #302032 alu nut. Use the MIDDLE hole as shown. Do not tighten the screw; leave the holder loose.
2. Slide a #307311 pivot pin through the holes in the rear lower arm.
3. Slide a 6mm shim onto the pin in front of the rear lower arm.
4. Slide a 3mm shim onto the pin behind the rear lower arm.
5. Insert the front end of the pin in the front lower holder.
6. Mount a lower suspension holder on the rear end of the pin. Attach the holder to the outside rear of the bulkhead using a #309336 (SH M3x12) screw and #302032 alu nut. Use the MIDDLE hole as shown. Do not tighten the screw; leave the holder loose.
7. Insert a 2mm clip on the screw between the rearmost holder and the bulkhead. Tighten the screws.

**Repeat to attach the other arm to the other rear bulkhead.**

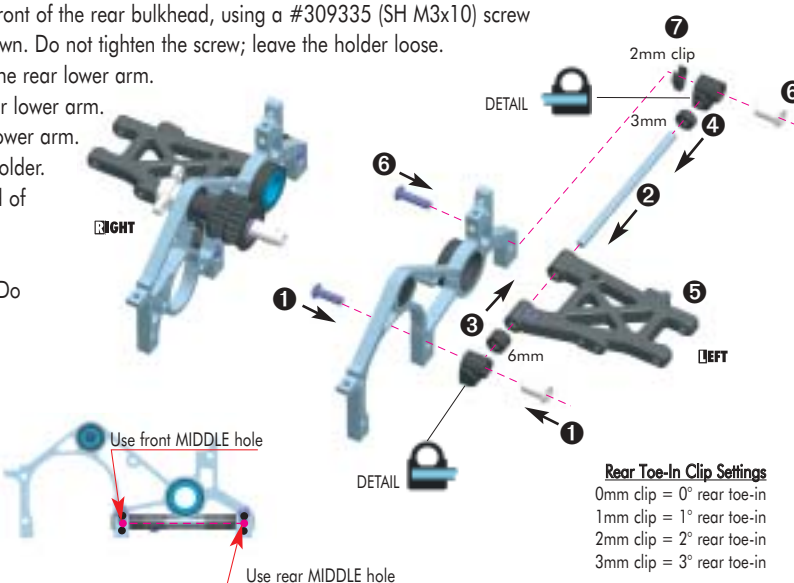


**Rear Toe-In Clip Settings**  
 0mm clip = 0° rear toe-in  
 1mm clip = 1° rear toe-in  
 2mm clip = 2° rear toe-in  
 3mm clip = 3° rear toe-in


**309343**  
SFH M3x6




**309334**  
SH M3x8



1. Mount the right rear bulkhead to the lower chassis using three #309343 (SFH M3x6) screws.
2. Place the long front drive belt on the layshaft pulley closest to the right bulkhead.
3. Place the short rear belt onto the differential.
4. Insert the LONGER shaft of the differential into the ball-bearing in the RIGHT bulkhead. Place the other end of the short drive belt on the layshaft's other fixed pulley.
5. Slide the left rear bulkhead into position over the other end of the differential, and mount to the lower chassis using three #309343 (SFH M3x6) screws.
6. Mount the #303040 aluminum rear bulkhead brace between the rear bulkheads with #309334 (SH M3x8) screws.

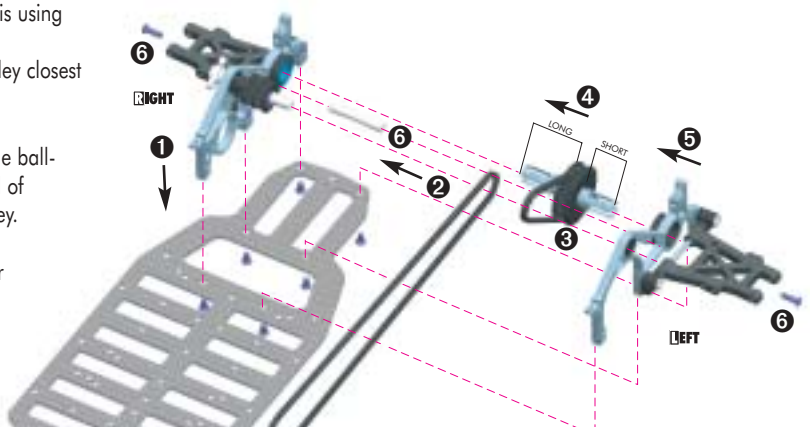

### 3. REAR SUSPENSION

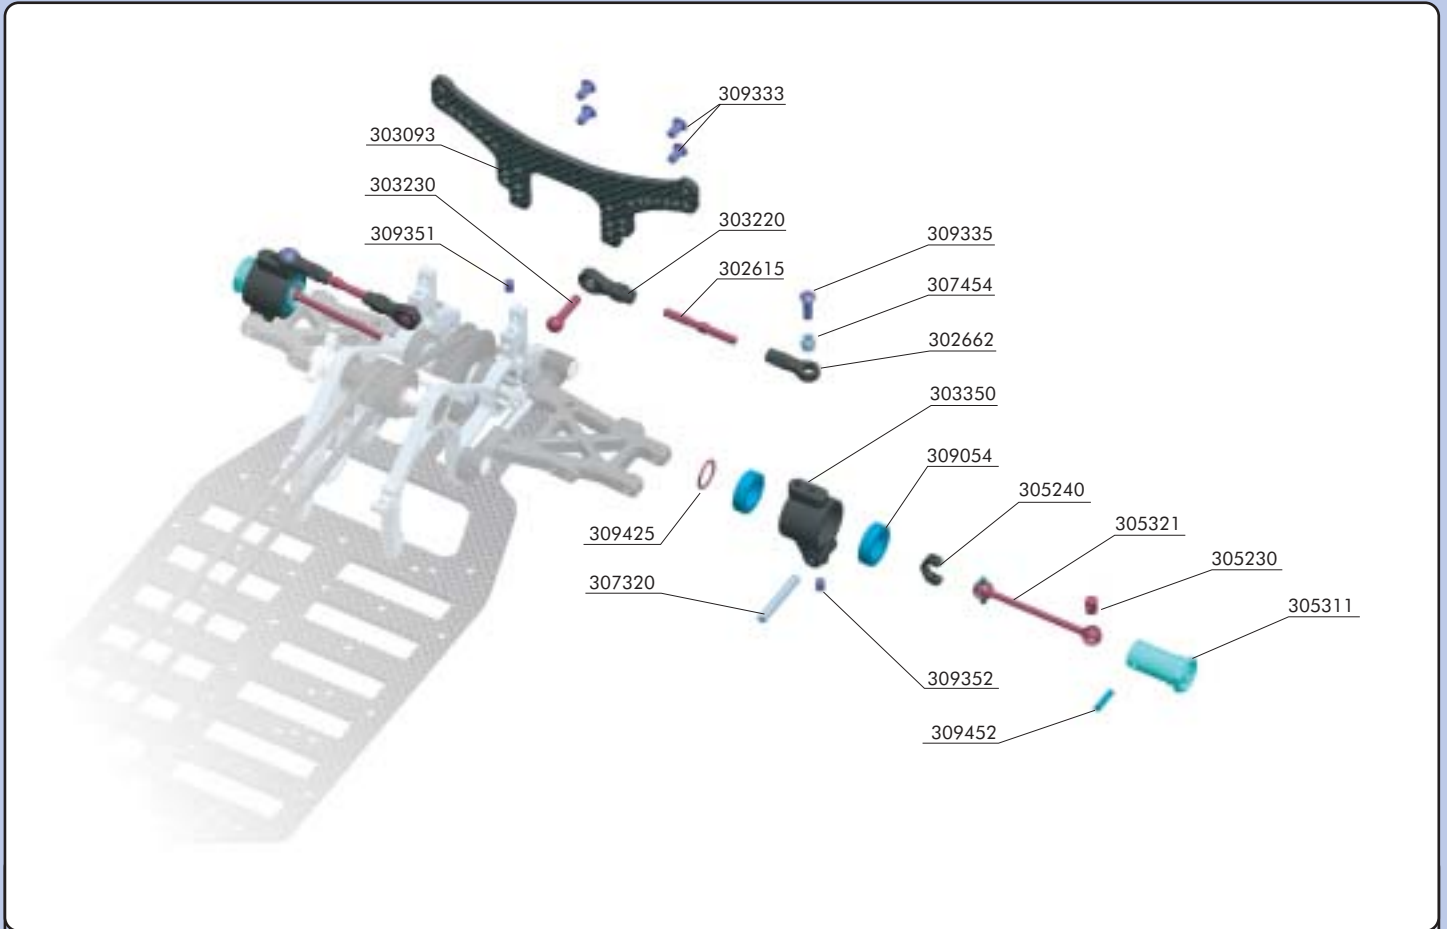

#### BAG 03

- 30 2615 ADJ. TURNBUCKLE L/R 30 MM - SPRING STEEL (2)
- 30 2662 BALL JOINT 5 MM - OPEN (6)
- 30 3093 SHOCK TOWER REAR - 2.5 MM GRAPHITE
- 30 3220 BALL JOINT 5.8 MM (4)
- 30 3230 ADJUSTABLE 5.8 MM BALL END - SPRING STEEL (2)
- 30 3350 COMPOSITE UPRIGHT REAR FOR C-HUB SUSPENSION
- 30 5230 DRIVE SHAFT COUPLING - SPRING STEEL (2)
- 30 5240 DRIVE SHAFT REPLACEMENT PLASTIC CAP 3 MM (4)
- 30 5311 WHEEL AXLE - 22 MM - INTEGR. HEX HUB - (FACTORY KIT) (2)
- 30 5321 DRIVE SHAFT - 51 MM - SPRING STEEL - (FACTORY KIT) (2)


- 30 7320 REAR PIVOT PIN FOR C-HUB - SPRING STEEL (2)
- 30 7454 PIVOT BALL 5.0 MM DOUBLE BEVEL SHOULDERS (10)
- 30 9054 HIGH-SPEED BALL-BEARING 10 x 15 x 4 BLUE COVERED (2)
- 30 9333 HEX SCREW SH M3x6 (10)
- 30 9335 HEX SCREW SH M3x10 (10)
- 30 9351 HEX SCREW SB M3x4 (10)
- 30 9352 HEX SCREW SB M3x5 (10)
- 30 9425 O-CLIP 10 (10)
- 30 9452 PIN 2x10 (10)



309452  
P 2x10

Build TWO axes by performing the following steps.

1. Lightly grease a #305230 coupling and insert it into the drive shaft joint.
2. Lightly grease the drive shaft end and slide it into the #305311 wheel axle. Align the holes in the coupling with the holes in the wheel axle.
3. Insert a #309452 (P 2x10) pin through the aligned holes in the coupling and wheel axle. Make sure the pin is evenly spaced on both sides of the wheel axle.
4. Install the #305240 plastic cap onto the drive shaft pins.

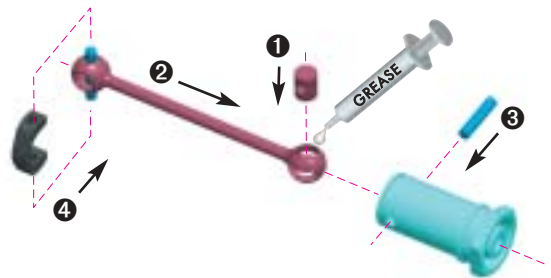


309054  
BB 10x15



309425  
C 10

Build TWO rear uprights by performing the following steps.

1. Slide a #309054 (BB 10x15) ball-bearing onto the wheel axle.
2. Insert the wheel axle through the rear upright until the bearing seats in the rear upright. Note the orientation of the parts in the image.
3. Slide another #309054 (BB 10x15) ball-bearing onto the wheel axle. Press the bearing into the rear upright, making sure it seats properly.
4. Secure the wheel axle in the rear upright by installing a #309425 snap ring in the groove of the wheel axle.

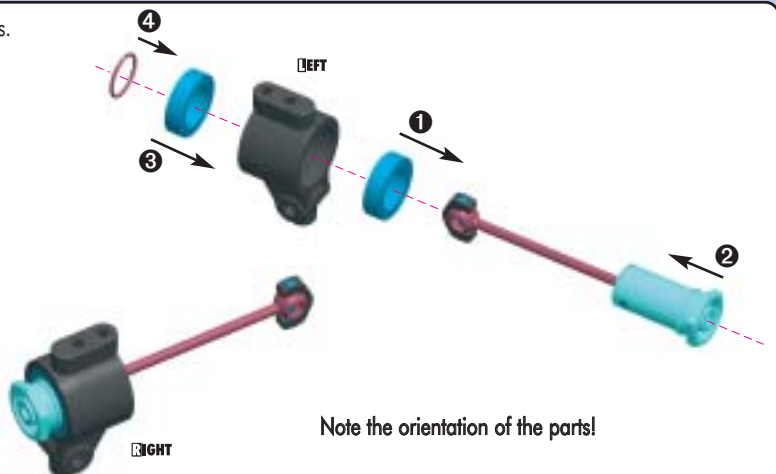

Note the orientation of the parts!



## To install a snap ring:

Place the hex portion of the wheel axle flat on a table. Put one end of the snap ring into the groove on the opposite side of the axle cutout, and use a slotted screwdriver to work the clip into the groove.



## To remove a snap ring:

Place the hex portion of the wheel axle flat on a table. Insert a small screwdriver in the axle cutout and pry it off, taking care not to let it fly off the workbench.

Use proper eye protection.

Removal



309352  
SB M3x5


Install both rear uprights by performing the following steps.

**1.** Place the driveshaft plastic cap into the diff outdrive slot. Insert the rear upright into the end of the rear lower arm as shown. Align the hole in the bottom of the rear upright and holes in the arm.

**2.** Slide a #307320 pivot pin through the aligned holes. Make sure the flat spot on the pivot pin is toward the bottom.

**3.** Thread and tighten the #309352 (SB M3x5) set screw in the bottom of the rear upright until it is tight on the pivot pin. Be very careful not to overtighten the screw, as the threads may strip in the composite rear upright.

**Check both rear uprights for freedom of movement.**

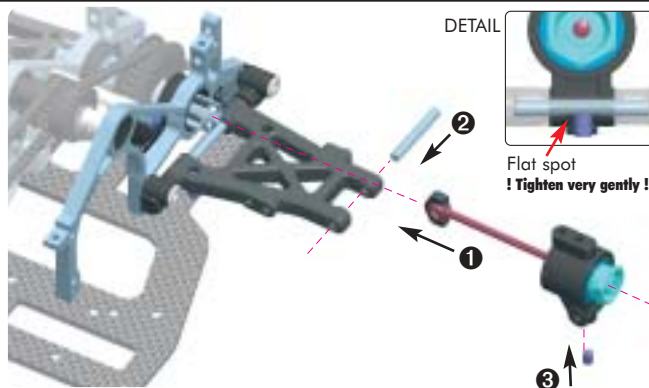

Assemble TWO rear camber linkages by performing the following steps.

**1.** Thread ball joints onto the ends of a #302615 turnbuckle.

**Important:** There are two types of ball joints: two with large holes and two with small holes. Thread the ball joint with the large hole onto the longer end of each turnbuckle. Adjust the turnbuckles to a length of 58 mm, measured end-to-end. The ball joints should be perpendicular (90°) to each other.

**2.** Snap a #303230 adjustable ball end into #303220 ball joint with the large hole.

Note: Each turnbuckle has a CCW thread on one end and a CW thread on the other end.



309335  
SH M3x10



307454  
PB 5mm



309351  
SB M3x4


Assemble the TWO rear suspension arms by performing the following steps.

**1.** Place the assembled linkage so the adjustable ball joint faces backward toward the rear bulkhead. Place the other ball joint atop the rear upright.

**2.** Pass a #309335 (SH M3x10) screw downward through a #307454 pivot ball and turnbuckle ball joint, and thread into the innermost hole in the top of the rear upright. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.

**3.** Insert the turnbuckle's adjustable ball end into the rear bulkhead until the ball end touches the bulkhead.

**4.** Thread a #309351 (SB M3x4) set screw into the top of the rear bulkhead to secure the ball end.

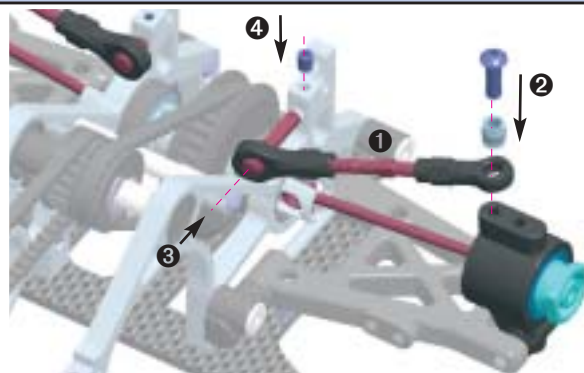


309333  
SH M3x6

Mount the #303093 rear shock tower to the rear bulkheads with four #309333 (SH M3x6) screws.


**Check the rear suspension for freedom of movement.**

**The suspension arms must fall freely when lifted up then dropped.**

If there is any binding that prevents the arms from moving freely, lightly squeeze the ball joints with pliers, and then recheck.

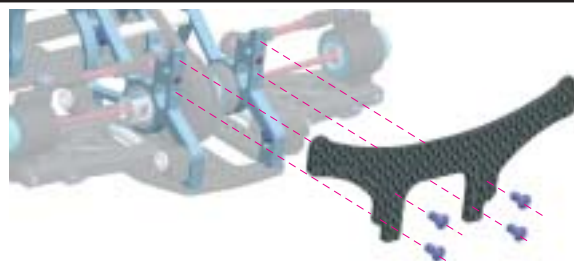

# 4. FRONT TRANSMISSION


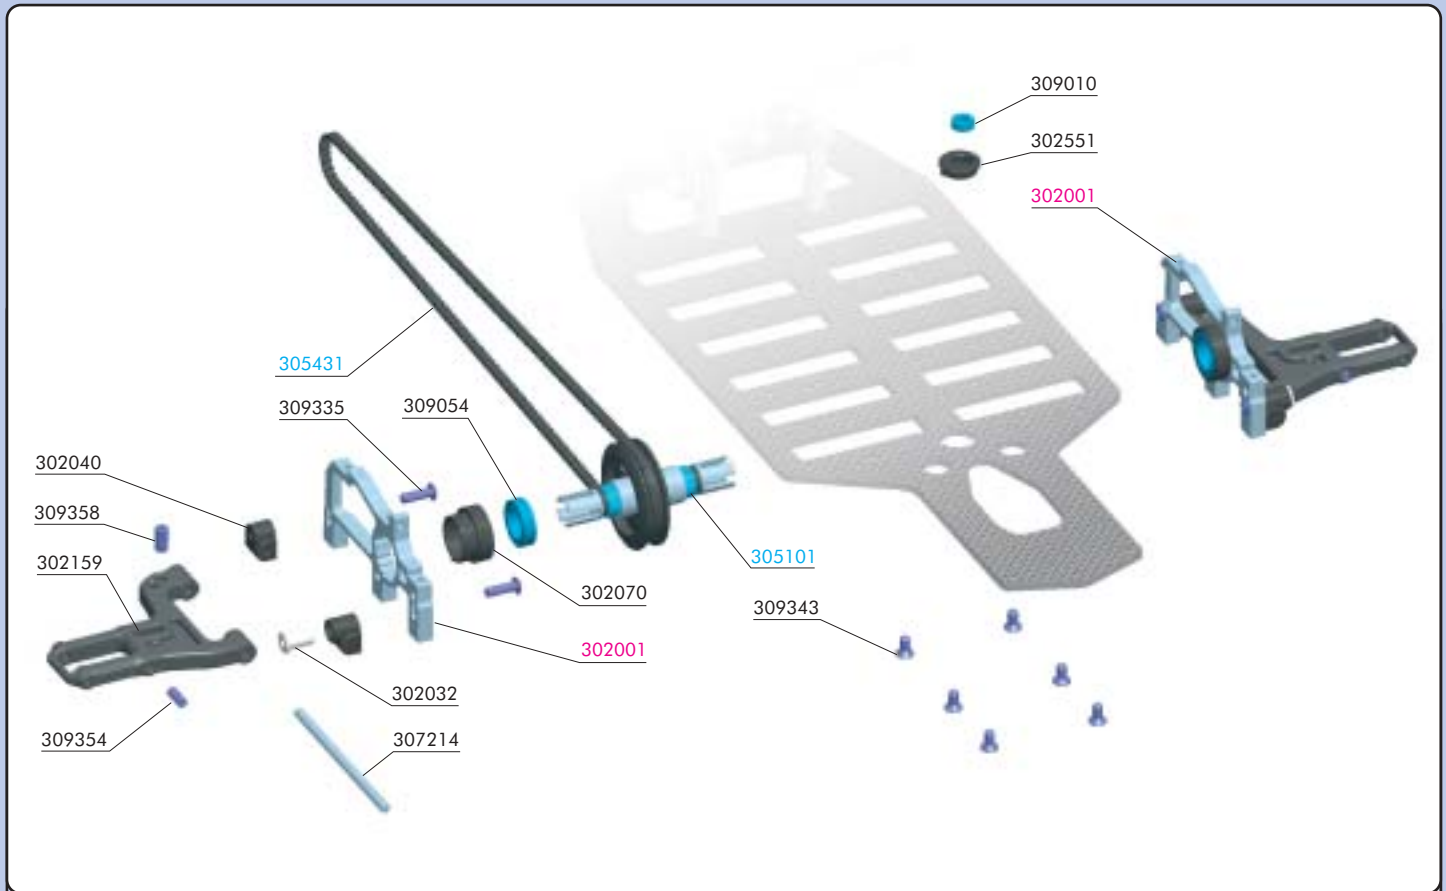


**BAG 04**

30 2032	ALU NUT FOR SUSP PIVOT PIN (2)	30 9343	HEX SCREW SFH M3x6 (10)
30 2040	LOWER SUSPENSION HOLDER ( SET 2+1+1)	30 9354	HEX SCREW SB M3x8 (10)
30 2070	ECCENTRIC COMPOSITE HUB FOR BULKHEAD + COVERS (4+2)	30 9358	HEX SCREW SB M4x8 (10)
30 2159	SHORT SUSPENSION ARM - FRONT LOWER - C-HUB		
30 2551	SERVO SAVER PLASTIC COVER - ECCENTRIC (2)	30 2001	ALU SUSP. ADJUSTABLE BULKHEADS - (FACTORY KIT) (4)
30 7214	FRONT WISHBONE PIVOT PIN LOWER - SPRING STEEL (2)	30 5101	ONE-WAY DIFFERENTIAL PRO (SET)
30 9010	BALL-BEARING MR74ZZ 4 x 7 x 2.5 (2)	30 5431	HIGH-PERFORMANCE KEVLAR DRIVE BELT FRONT 3 x 507 MM
30 9054	HIGH-SPEED BALL-BEARING 10 x 15 x 4 BLUE COVERED (2)		
30 9335	HEX SCREW SH M3x10 (10)		



**1.** Press the #302070 large eccentric ball-bearing holders into the front bulkheads. Align the tab of each holder with the middle (bottom) notch in each bulkhead as shown. It may take some effort to press the large bearing holders into the bulkheads.  
**2.** Press #309054 (BB 10x15) ball-bearings into the eccentric holders. Make sure the bearings turn freely and easily.

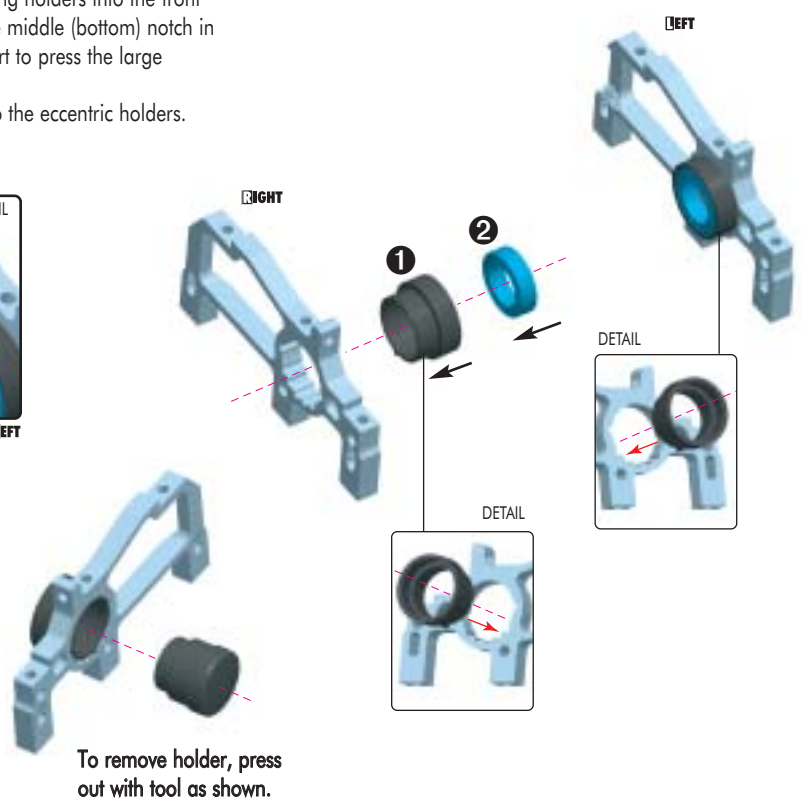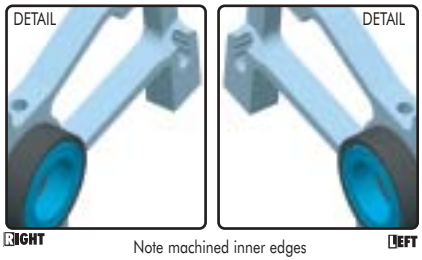

**BELT TENSION ADJUSTMENT**

**To tighten front belt:**  
Rotate front nylon hubs in arrow direction (A)

**To loosen front belt:**  
Rotate front nylon hubs in arrow direction (B)

INITIAL POSITION: PLACE TAB IN THIS NOTCH



309358  
SB M4x8



309354  
SB M3x8

The left and right front lower arms are mirror images.

1. Thread a #309358 (SB M4x8) downstop adjustment screw into the innermost hole at the rear of each front lower arm, closest to the pivot pin holes. The screws must protrude 2.8 mm below the arms.
2. Thread one #309354 (SB M3x8) setscrew into the hole at the front of the arm as shown. The setscrew must protrude 3.0 mm.




309335  
SH M3x10

1. Mount lower suspension holders to the outside rear of the front bulkheads. Use the MIDDLE holes as shown.

The LEFT rear holder has a cavity for an alu nut. This holder attaches to the bulkhead with a #309335 (SH M3x10) screw and #302032 alu nut. The RIGHT rear holder does NOT have a cavity for an alu nut. This holder attaches to the bulkhead with a #309335 (SH M3x10) screw ONLY.

2. For each front lower arm, slide a #307214 pivot pin through the holes in the arm, and into the holes in the rear lower holders.

3. For each front lower arm, mount a front lower holder onto the front of the pivot pin. Attach the front lower holders to the outside front of the bulkheads using a #309335 (SH M3x10) screw and #302020 alu nut. Use the MIDDLE holes as shown.

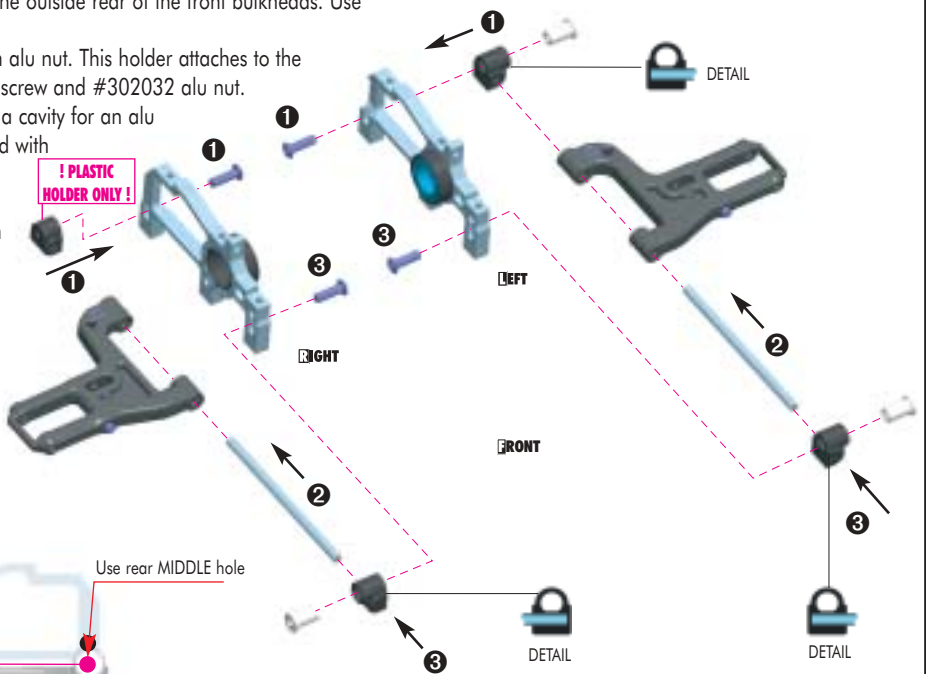

309010  
BB 4x7



309343  
SFH M3x6

1. Press the #302551 eccentric servo saver plastic holder into the corresponding hole in the chassis. The tab goes to the right (towards the servo).


2. Press the #309010 (BB 4x7) ball-bearing into the plastic holder in the chassis.

3. Mount the right front bulkhead to the lower chassis using three #309343 (SFH M3x6) screws.


4. Place the front one-way axle inside the front end of the long drive belt. Make sure the front axle is oriented so the shorter output shaft is near the right front bulkhead.

5. Insert the shorter output shaft of the front axle into the ball-bearing in the right front bulkhead.

6. Slide the left front bulkhead into position over the other end of the front axle, and mount to the lower chassis using three #309343 (SFH M3x6) screws.

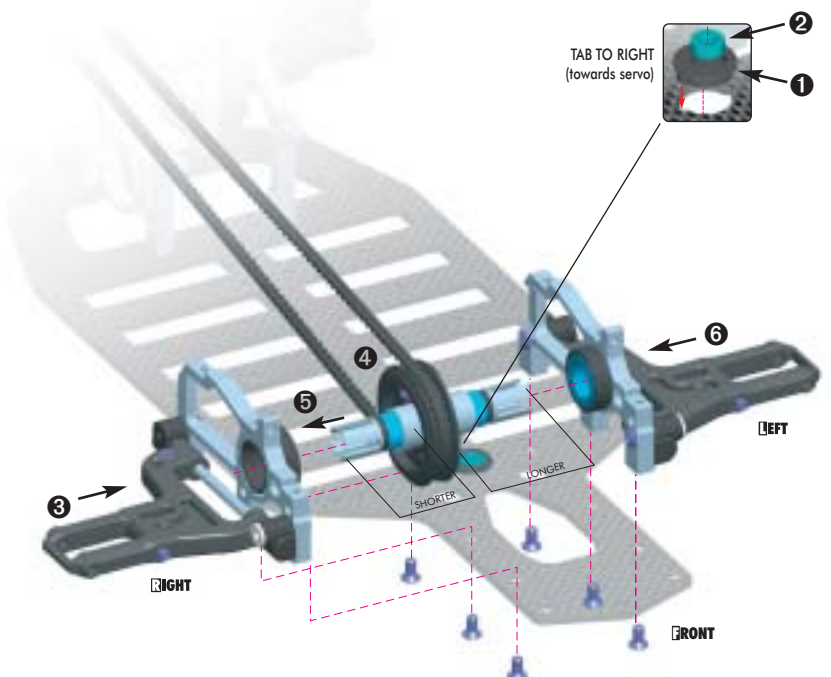

# 5. FRONT SUSPENSION

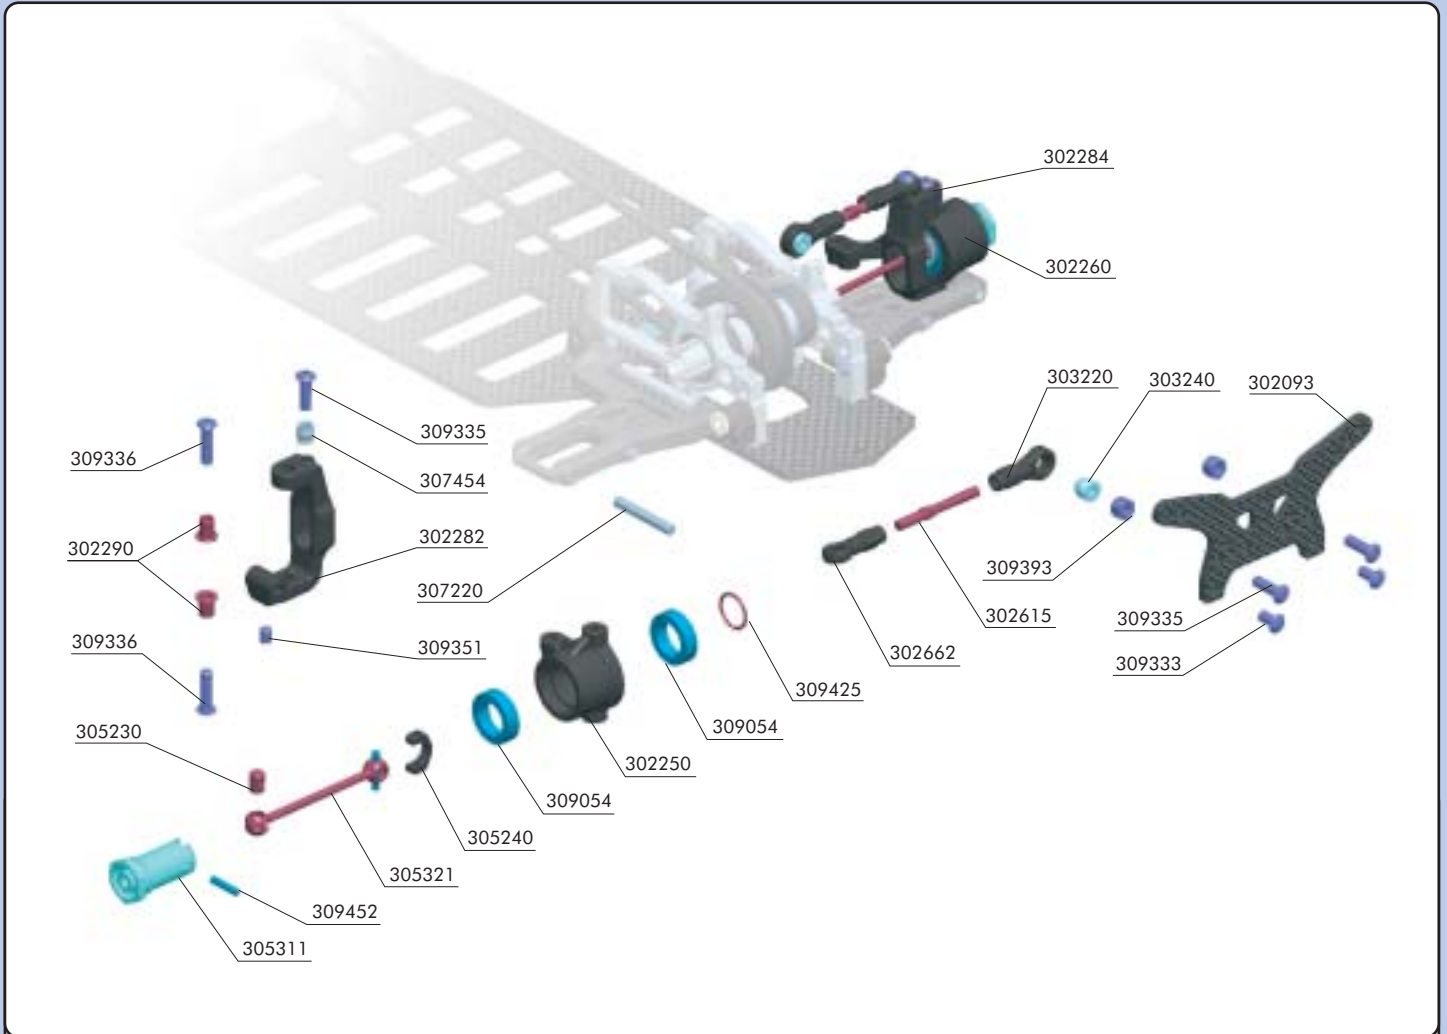

**BAG  
05**


30 2093	ULTRA-TUNE SHOCK TOWER FRONT - GRAPHITE	30 5311	WHEEL AXLE - 22 MM - INTEGR. HEX HUB - (FACTORY KIT) (2)
30 2250	COMPOSITE STEERING BLOCK RIGHT FOR C-HUB SUSP.	30 5321	DRIVE SHAFT - 51 MM - SPRING STEEL - (FACTORY KIT) (2)
30 2260	COMPOSITE STEERING BLOCK LEFT FOR C-HUB SUSP.	30 7220	FRONT PIVOT PIN FOR C-HUB (2)
30 2282	COMPOSITE C-HUB FRONT BLOCK, RIGHT - MEDIUM - CASTER 3°	30 7454	PIVOT BALL 5.0 MM DOUBLE BEVEL SHOULDERS (10)
30 2284	COMPOSITE C-HUB FRONT BLOCK, LEFT - MEDIUM - CASTER 3°	30 9054	HIGH-SPEED BALL-BEARING 10 x 15 x 4 BLUE COVERED (8)
30 2290	C-HUB BUSHING (4)	30 9333	HEX SCREW SH M3x6 (10)
30 2615	ADJ. TURNBUCKLE L/R 30 MM - SPRING STEEL (2)	30 9335	HEX SCREW SH M3x10 (10)
30 2662	BALL JOINT 5 MM - OPEN (6)	30 9336	HEX SCREW SH M3x12 (10)
30 3220	BALL JOINT 5.8 MM (4)	30 9351	HEX SCREW SB M3x4 (10)
30 3240	BALL UNIVERSAL 5.8 MM HEX (4+4)	30 9393	NUT M3 (10)
30 5230	DRIVE SHAFT COUPLING - SPRING STEEL (2)	30 9425	O-CLIP 10 (10)
30 5240	DRIVE SHAFT REPLACEMENT PLASTIC CAP 3 MM (4)	30 9452	PIN 2x10 (10)



309452  
P 2x10

Build TWO axles by performing the following steps.

1. Lightly grease a #305230 coupling and insert it into the drive shaft joint.
2. Lightly grease the drive shaft end and slide it into the #305311 wheel axle. Align the holes in the coupling with the holes in the wheel axle.
3. Insert a #309452 (P 2x10) pin through the aligned holes in the coupling and wheel axle. Make sure the pin is evenly spaced on both sides of the wheel axle.
4. Install the #305240 plastic cap onto the drive shaft pins.

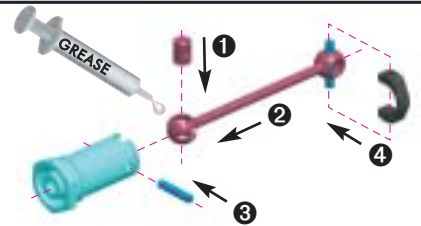


309054  
BB 10x15



309425  
C 10

Build TWO front steering blocks by performing the following steps.

1. Slide a #309054 (BB 10x15) ball-bearing onto the wheel axle.
2. Insert the wheel axle through the steering block until the bearing seats in the steering block. Note the orientation of the parts in the image.
3. Slide another #309054 (BB 10x15) ball-bearing onto the wheel axle. Press the bearing into the steering block, making sure it seats properly.
4. Secure the wheel axle in the steering block by installing a #309425 snap ring in the groove of the wheel axle.

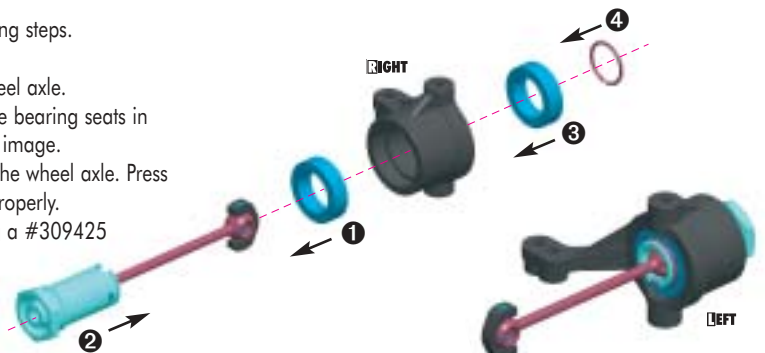

To install a snap ring:

Place the hex portion of the wheel axle flat on a table.

Put one end of the snap ring into the groove on the opposite side of the axle cutout, and use a slotted screwdriver to work the clip into the groove.



Installation

To remove a snap ring:

Place the hex portion of the wheel axle flat on a table. Insert a small screwdriver in the axle cutout and pry it off, taking care not to let it fly off the workbench.



Use proper eye protection.


Removal



309336  
SH M3x12

Assemble the TWO front C-hubs by performing the following steps.

1. Insert two #302290 bushings into the C-hub upper and lower holes. Install the bushings from the inside of the C-hub as shown, with the flanges facing into the C-hub.
2. Insert the steering block assembly into the C-hub, passing the driveshaft through the oblong hole in the side of the C-hub. Insert the left steering block assembly into C-hub marked L3, and insert the right steering block assembly into C-hub marked R3.
3. Pass two #309336 (SH M3x12) screws through the bushings, and thread into the top and bottom of the steering block. The steering blocks should move freely.

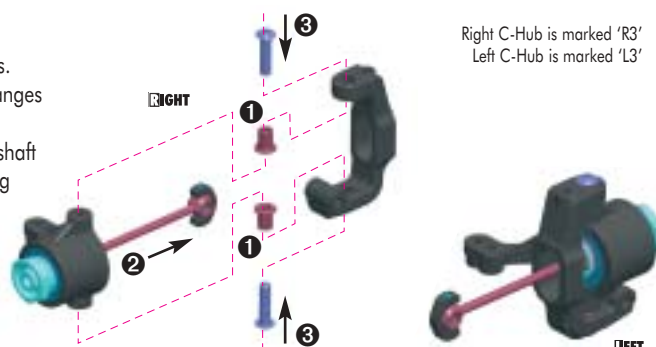

309351  
SB M3x4



307220  
SH M3x6




309335  
SH M3x10



309393  
N M3

Install both front C-hub assemblies in the front lower arms by performing the following steps.



1. Place the driveshaft plastic cap into the front axle outdrive slot. Insert the C-hub assembly into the end of the front lower arm as shown. Align the hole in the bottom of the C-hub and holes in the arm.
2. Slide a #307220 pivot pin through the aligned holes. Make sure the flat spot on the pivot pin is toward the bottom.
3. Thread and tighten the #309351 (SB M3x4) set screw in the bottom of the C-hub until it is tight on the pivot pin's flat spot. Be very careful not to overtighten the screw, as the threads may strip in the composite C-hub. The C-hub assembly should move freely.
4. Mount the #302093 front shock tower to the front bulkheads with two #309333 (SH M3x6) screws.
5. Mount two #309393 M3 nuts to the rear of the front shock tower using two #309335 (SH M3x10) hex screws, using the holes shown.
6. Mount two #303240 balls to the rear of the shock tower on the same screws, against the M3 nuts.

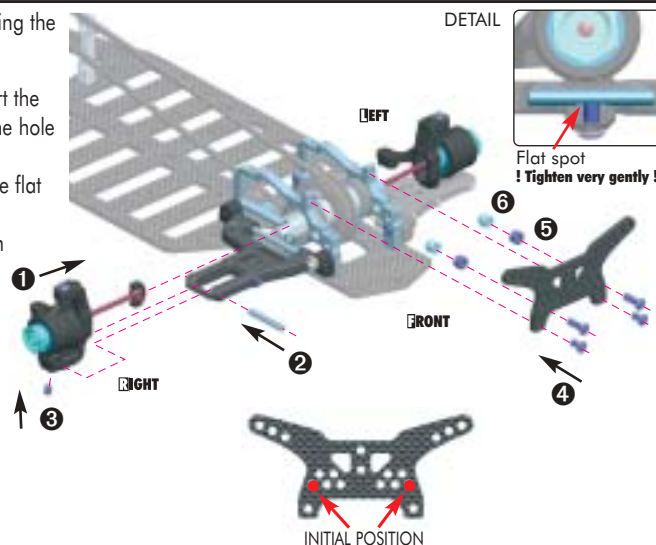

Assemble TWO front camber linkages by threading ball joints onto the ends of a #302615 turnbuckle as shown.

The ball joints should be perpendicular (90°) to each other. Adjust the linkages to a length of 51.5 mm, measured end-to-end.

Note: Each turnbuckle has a CCW thread on one end and a CW thread on the other end.

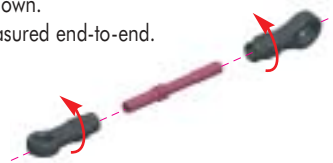

309335  
SH M3x10




307454  
PB 5 mm


Assemble TWO front suspension arms by performing the following steps.

1. Place the assembled camber linkage between the front shock tower and C-hub.
2. Pass a #309335 (SH M3x10) screw downward through a #307454 pivot ball and linkage ball joint, and thread into the hole in the top of the C-hub. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.
3. Snap the linkage ball joints onto the balls at the rear of the shock tower.

Check arms for free movement.

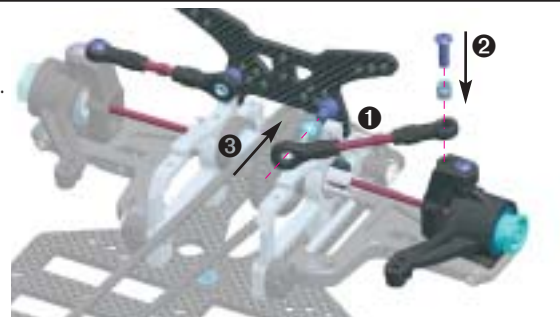

# 6. STEERING

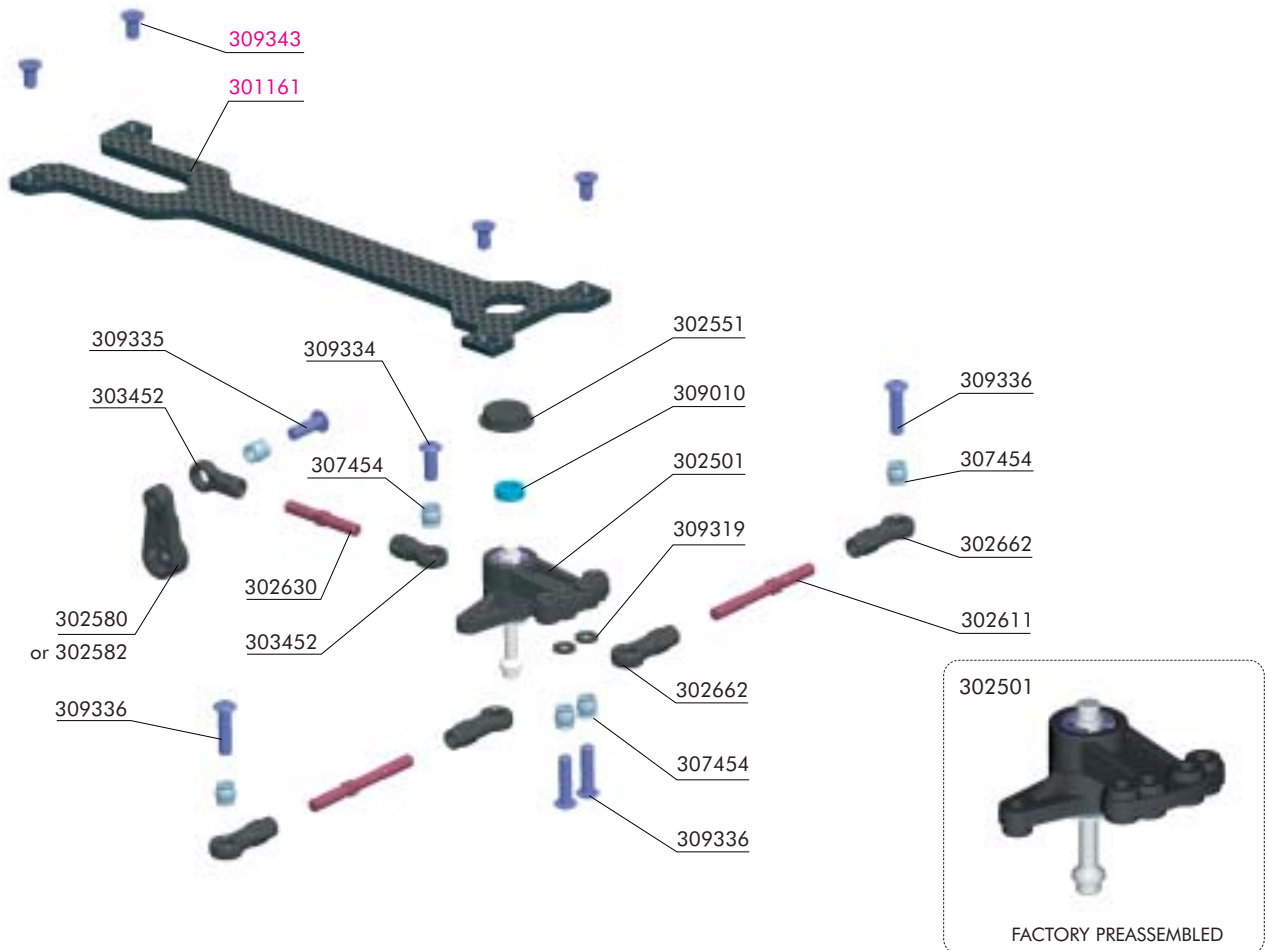


**BAG 06**

- 30 2501 DUAL-ACKERMANN CENTRAL SERVO SAVER (SET)
- 30 2551 SERVO SAVER PLASTIC COVER - ECCENTRIC (2)
- 30 2580 COMPOSITE SERVO HORN - KO, JR, AIRTRONICS, MULTIPLEX
- 30 2582 COMPOSITE SERVO HORN - FUTABA, ROBE
- 30 2611 ADJ. STEERING ROD L/R 35 MM - SPRING STEEL (2)
- 30 2630 ADJ. STEERING ROD 20 MM - SPRING STEEL (2)
- 30 2662 BALL JOINT 5 MM - OPEN (6)
- 30 3452 BALL JOINT 5 MM - SHORT OPEN (4)
- 30 7454 PIVOT BALL 5.0 MM DOUBLE BEVEL SHOULDERS (10)

- 30 9010 BALL-BEARING MR74ZZ 4x7x2.5 (2)
- 30 9319 UNIVERSAL SET OF PLASTIC SHIMS
- 30 9334 HEX SCREW SH M3x8 (10)
- 30 9335 HEX SCREW SH M3x10 (10)
- 30 9336 HEX SCREW SH M3x12 (10)
- 30 1161 UPPER DECK EVO 2 - 2.5 MM GRAPHITE - CNC MACHINED
- 30 9343 HEX SCREW SFH M3x6 (10)


Assemble the right and left steering rods by threading #302262 ball joints onto the ends of #302611 turnbuckles. The ball joints should be parallel with each other. Adjust to the proper lengths as shown.

Note: Each turnbuckle has a CCW thread on one end and a CW thread on the other end.

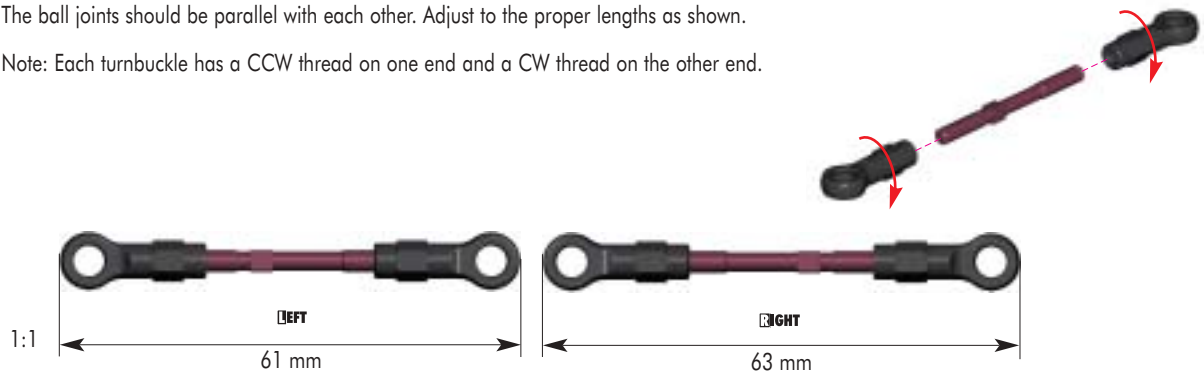

Assemble the servo link by threading #303452 ball joints onto the ends of a #302630 turnbuckle. The ball joints should be perpendicular (90°) to each other. Adjust to the proper length as shown.

Note: The turnbuckle has a CCW thread on one end and a CW thread on the other end.

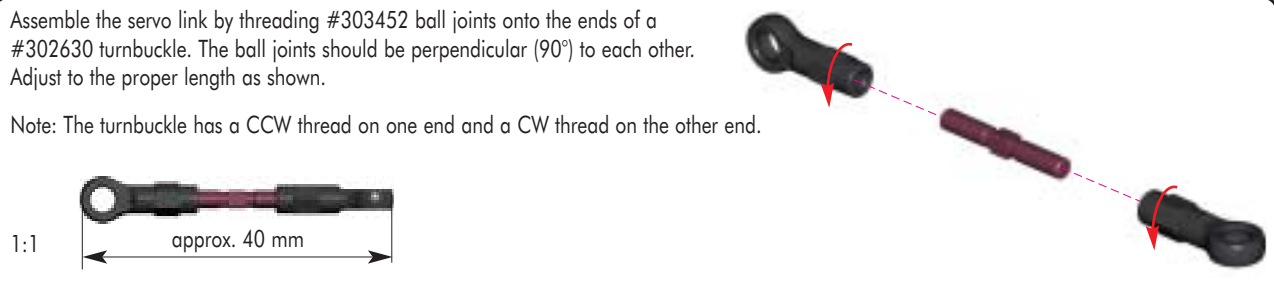

#309336  
SH M3x12

#307454  
PB 5 mm

#309319  
SHIM 3x5x1

#309334  
SH M3x8

1. Attach the left and right steering rods to the servo saver. Pass a #309336 (SH M3x12) screw upward through the following parts:
  - #307454 pivot ball
  - steering rod inner ball joint (on long end)
  - #309319 shim
 Thread the screw into the inner hole on the bottom of the servo saver. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.
2. Attach the servo link to the servo saver. Pass a #309334 (SH M3x8) screw downward through a #307454 pivot ball and servo link ball joint, and thread into the servo saver side arm. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.

DETAIL

INITIAL POSITION:  
MOUNT STEERING  
RODS TO INNER HOLES

#309335  
SH M3x10

#307454  
PB 5 mm

1. Choose the proper servo horn to fit your servo; see the parts list. Orient the servo horn as shown in the image.
2. Pass a #309335 (SH M3x10) screw through a #307454 pivot ball and servo link ball joint, and into the hole at the end of the servo horn. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.

**Check all servo saver arms for freedom of movement.**

#309010  
BB 4x7

#309343  
SFH M3x6

1. Press a #302551 eccentric servo saver plastic cover into the corresponding hole in the bottom of the upper deck. The tab goes to the right (towards the servo).
2. Press a #309010 (BB 4x7) ball-bearing into the plastic cover in the top deck.
3. Position the servo saver in the chassis, and slide the steering rods through the bulkheads. Place the servo saver lower axle into the ball-bearing in the chassis.
4. Place the top deck atop the bulkheads. The servo saver upper axle fits into the ball-bearing in the top deck.
5. Attach the upper deck to the bulkheads using four #309343 (SFH M3x6) screws.

Slide steering rods through bulkheads

#309336  
SH M3x12

#307454  
PB 5 mm

Attach the left and right steering rods to the steering blocks.

Pass a #309336 (M3x12) screw downward through a #307454 pivot ball and the steering rod ball joint, and thread into the steering block outer position. Tighten until the pivot ball snaps into the ball joint, and then tighten the whole assembly.


**Check the steering system for freedom of movement.**

INITIAL POSITION:  
MOUNT STEERING  
RODS TO OUTER HOLES

# 7. SHOCK ABSORBERS

## ADJUSTABLE PISTONS

## NON-ADJUSTABLE PISTONS

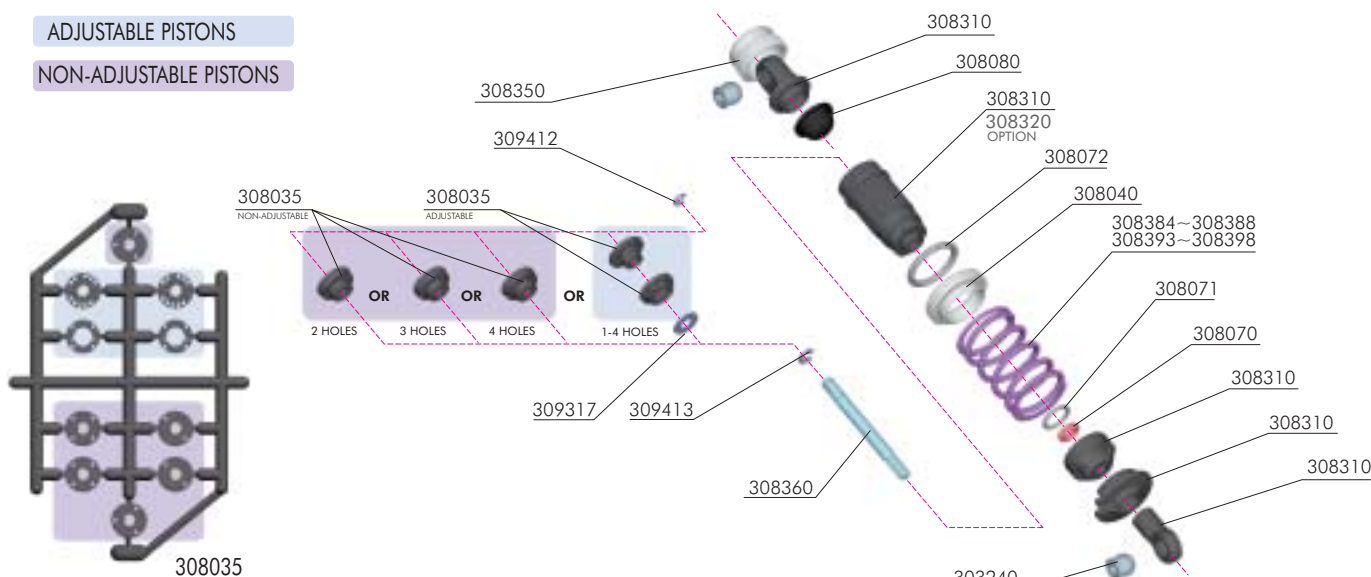

### BAG 07

30 3240 BALL UNIVERSAL 5.8 MM HEX (4+4)  
 30 8035 NYLON PISTONS ADJUSTABLE + NON-ADJUST. (SET 2+6)  
 30 8040 SHOCK ADJ. NUT ALU + O-RING (4+4)  
 30 8070 O-RING / SHIM + C CLIPS (4+12)  
 30 8071 O-RING 5x1 (4)  
 30 8072 O-RING 12.1x1.6 (4)  
 30 8080 SHOCK ABSORBER MEMBRANES (4)  
 30 8310 NYLON FRAME SHOCK PARTS 4-STEP

30 8350 SHOCK CAP-NUT ALU (2)  
 30 8360 HARDENED PISTON RODS FOR KEYED PISTONS (2)  
 30 8380 ADDITIONAL XRAY ULTIMATE RACING SPRINGS (20)  
 30 8390 XRAY SELECTED ULTIMATE RACING SPRINGS (24)  
 30 9317 WASHER S 3.2 (10)  
 30 9412 E-CLIP 2 (10)  
 30 9413 E-CLIP 3 (10)

Properly functioning shocks are very important to the performance of your car. This XRAY shock set contains parts to build four externally-adjustable or non-adjustable shocks. Both adjustable and non-adjustable shocks feature XRAY's unique keying system that positively locks the pistons to the shock rods.

Carefully cut the parts from the frames, and then VERY carefully trim any excess flash with a sharp hobby knife. We recommend you use extra-fine sandpaper to gently smooth small flashing. The side walls of the pistons must be perfectly round and smooth for proper operation.

**We recommend you build all four shocks simultaneously. Ensure you have a clean work area to build the shocks.**

## ADJUSTABLE PISTONS

Apply a drop or two of shock oil to the piston pieces. Press upper piston (A) into lower piston (B) as shown. The upper piston with holes (A) has a small tab that must exactly fit into one of the notches in lower piston (B).



Assemble FOUR adjustable shock rod assemblies by performing the following steps.

1. Press a #309413 (C 2.3) E-clip into the lower groove in the shock rod.
2. Place a #309317 (S 3.2) washer onto the shock rod atop the C-clip.
3. Press the piston assembly onto the shock rod, aligning flat in pistons with flat on the shock rod.
4. Press a #309412 (C 1.9) E-clip into the upper groove in the shock rod.
5. Apply a drop or two of shock oil to the piston rod assembly, and then insert the shock rod assembly into the shock body.



Cutaway view of adjustable piston

## NON-ADJUSTABLE PISTONS

Assemble FOUR non-adjustable piston rod assemblies by performing the following steps. Use the 3-hole non-adjustable pistons.

1. Press a #309413 (C 2.3) E-clip into the lower groove in the shock rod.
2. Press a 3-hole piston onto the shock rod, aligning flat in piston with flat on the shock rod.
3. Press a #309412 (C 1.9) E-clip into the upper groove of the shock rod.
4. Apply a drop or two of shock oil to the piston rod assembly, and then insert the shock rod assembly into the shock body.



308072  
O 12.1x1.6

- Perform the following steps for all four shocks.
1. Lubricate the inner edge of a #308072 (O 12.1x1.6) O-ring with a drop or two of shock oil. Insert it into the groove of a #308040 threaded collar.
  2. Carefully thread the collar onto the shock body as shown. **Be careful not to cross-thread the collar on the shock body.**




Cutaway view of assembled adjustment collar





1. Insert the larger #308071 (O 5x1) O-ring onto the shock body, until it seats around the shock body extension.
2. Lubricate the small #308070 (O 3.1x1.6) O-ring with a drop or two of shock oil. Taking care not to rip or damage the O-ring, slide it over the end of the shock rod.
3. Install the end-cap onto the bottom of the shock body. Lock it in place by pressing it on, then turning it CW about 1/8 of a turn. For easy assembly, use a #183010 HUDY Shock Assembly Tool.

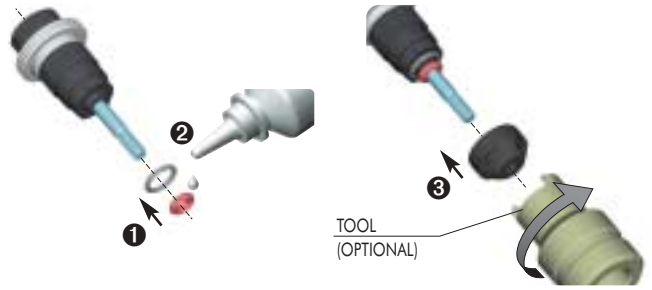

TOOL  
(OPTIONAL)

Grip the shock rod. Use either a shock rod clamping tool, or grip the top of the shock rod's exposed thread with side-cutting pliers.

Thread the ball joint onto the shock rod until approximately 1mm of thread is exposed.



HINT: Pre-thread the ball joint using an M3 screw.

WARNING! Be careful not to pre-thread too far, since the ball joint may split or the plastic threads may strip out

1. Fully extend the piston rod so the piston is at the bottom of the shock body.
2. Hold the shock upright and slightly overfill the shock body with shock oil.
3. Let the oil settle and allow air bubbles to rise to the top. Slowly move the piston up and down until no more air bubbles appear. Add shock oil as necessary.
4. Pull the piston rod most of the way out of the shock body.
5. Place the rubber bladder on top of the shock body. Some oil should spill out.
6. Move the piston out very slightly so the bladder seals against the top of the shock body.



1. Place the top pivot mount on top of the bladder. Note the tab on the top pivot mount.
2. Place the #308350 collar over the top pivot mount, and thread it fully onto the shock body. More excess oil may escape. **Ensure the notch in the collar fits over the tab on the top pivot mount.**

### Shock bleeding:

Turn the shock upside down and pull the shock rod out to full extension. Release the shock end-cap by turning it CCW and pulling it slightly away from the shock body. Let the shock "vent" for at least 10 minutes; excess oil should seep out the end of the shock body. If the shock rod doesn't retract slightly into the shock body, push it in by 1~2mm. Replace the end-cap.

Check the shock for proper operation. The shock rod must move in and out freely with only "hydraulic" dampening. The shock rod should not extend out by itself when pushed in and released, nor should it be drawn into the shock body when extended and released. If this happens, reopen the shock, refill with oil, reassemble, and repeat the bleeding procedure.



### Shock length adjustment:

It is VERY important that all shocks are equal length. Fully extend the shock absorber and measure the end-to-end length; we recommend using digital calipers to give an accurate measurement. If a shock absorber is shorter or longer than others, adjust the shock length by tightening or loosening the ball joint on the shock rod.

### Damping adjustment:

If you built the adjustable shocks, fully extend the shock rod and turn it slightly to lock the piston in the shock body.

Turning the shock rod fully CCW aligns 4 holes in the pistons (softest damping). Turning the shock rod fully CW aligns 1 hole in the pistons (hardest damping). The shocks have four settings, each of which can be felt by a slight "click".

Set all four shocks initially to position 3 (3 holes open).

SOFTEST 4 3 2 1 HARDEST




Cutaway view of assembled shock absorber

### Final shock assembly:


1. Slide a spring onto the end of the shock.
2. Secure the spring with a spring cup, and settle the spring cup on the ball joint.
3. Use pliers to install two #303240 balls in each shock; one in each of the upper and lower eyelets.



HINT: Press ball into side of top mount with tab

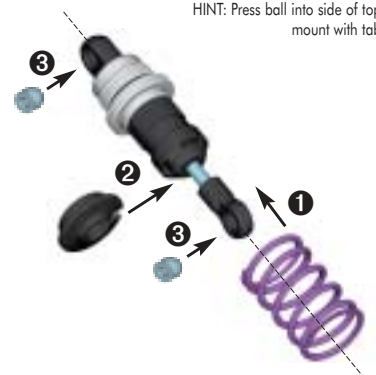

# 8. REAR FINAL ASSEMBLY

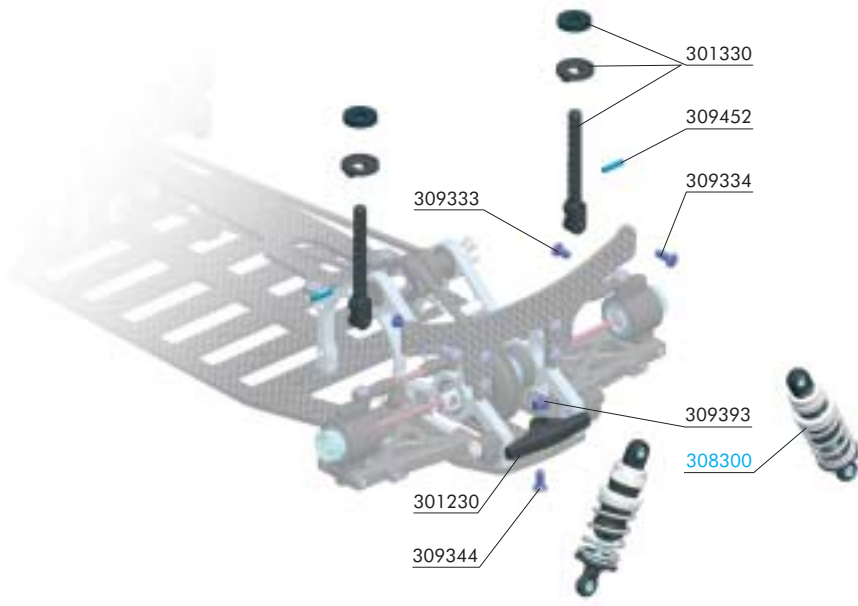

**BAG  
08**

30 1230 COMPOSITE BUMPER REAR  
 30 1330 REAR BODY MOUNT SET  
 30 9333 HEX SCREW SH M3x6 (10)  
 30 9334 HEX SCREW SH M3x8 (10)  
 30 9344 HEX SCREW SFH M3x8 (10)

30 9393 NUT M3 (10)  
 30 9452 PIN 2x10 (10)

30 8300 XRAY SHOCK ABSORBER-SET 4-STEP (2)




309334  
SH M3x8



309452  
P 2x10

Assemble TWO rear body posts by performing the following steps.

1. Mount the body post to the front of the rear shock tower. The bottom plastic pin fits into the lower hole. Use a #309334 (SH M3x8) screw to fasten each body post to the shock tower.
2. Insert a #309452 (P 2x10) pin into one of the holes in the rear body post. Insert the other pin into the same hole in the other body post.
3. Glue a rubber washer to the top of a plastic body support.
4. Slide the body support onto the body post, and snap onto the pin.

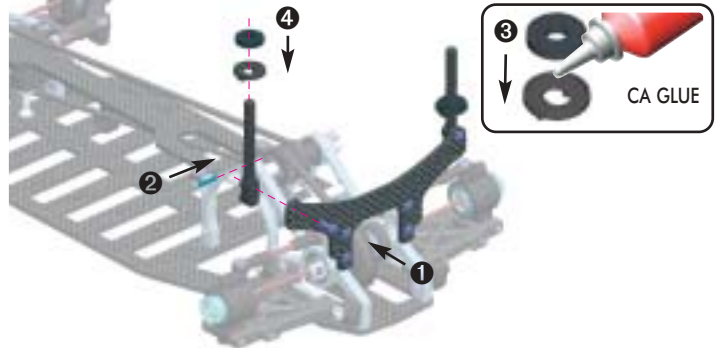

309333  
SH M3x6

Attach TWO rear shocks by performing the following steps.

1. Mount the top pivot ball of the assembled rear shock to the rear shock tower using #309333 (SH M3x6) screw. Use the indicated hole as shown.
2. Thread the lower pivot ball of the assembled rear shock onto the protruding screw at the back of the rear lower arm.




REAR SHOCK TOWER

INITIAL POSITION



REAR LOWER ARM

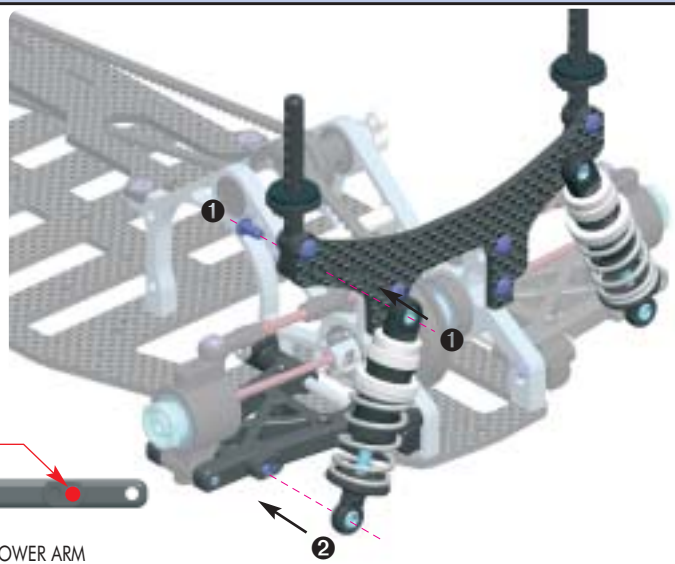

309344  
SFH M3x8




309393  
N M3

Attach #301230 rear bumper to back edge of chassis using #309344 (SFH M3x8) screw and #309393 (N M3) nut.



# 8. FRONT FINAL ASSEMBLY

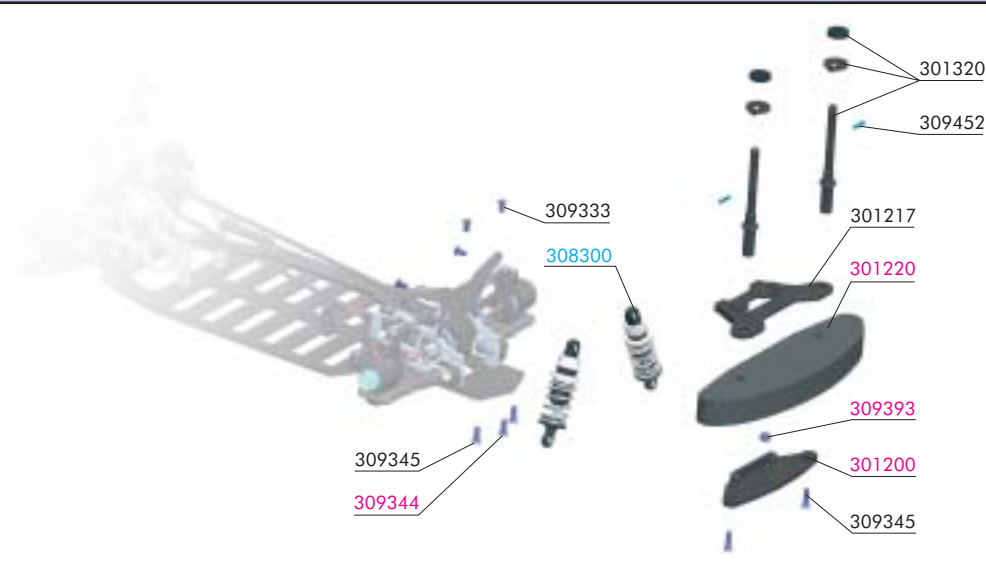

**BAG 08**


30 1217 COMPOSITE UPPER BUMPER SUPPORT  
 30 1320 FRONT BODY MOUNTS ( SET )  
 30 9333 HEX SCREW SH M3x6 (10)  
 30 9345 HEX SCREW SFH M3x10 (10)  
 30 9452 PIN 2x10 (10)

30 1200 COMPOSITE BUMPER  
 30 1220 FOAM BUMPER  
 30 9344 HEX SCREW SFH M3x8 (10)  
 30 9393 NUT M3 (10)


30 8300 XRAY SHOCK ABSORBER-SET 4-STEP (2)



- Place a #309393 (N M3) nut into the hex recess atop the #301200 lower bumper.
- Place the lower bumper onto the front of the chassis.
- Thread a #309344 (SFH M3x8) screw up through the bottom of the chassis, through the bumper, and into the M3 nut.
- Thread two #309345 (SFH M3x10) screws up through the bottom of the chassis and into the lower bumper.


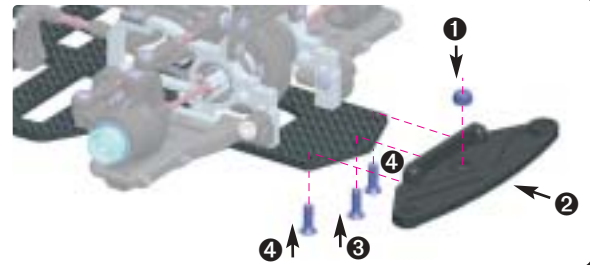


- Insert the front body posts into the holes of the #301217 upper bumper support.
- Slide the #301220 foam bumper up onto the body posts; the posts should extend down through the foam bumper.
- Position the bumper assembly onto the lower bumper.
- Secure the body posts to the lower bumper by threading two #309345 (SFH M3x10) screws upward through lower bumper into the bodyposts.
- Secure the upper bumper support to the front bulkheads with two #309333 (SH M3x6) screws.
- Glue rubber washers to the tops of the plastic body supports.
- Insert a #309452 (P 2x10) pin into a hole in a front body post. Insert the other pin into the same hole in the other body post.
- Slide the body supports into the body posts, and snap onto the pins.

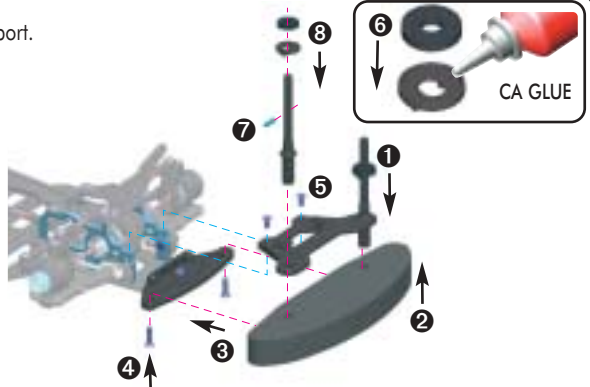


Attach TWO front shocks by performing the following steps.

- Mount the top pivot ball of the assembled front shock to the graphite shock tower using #309333 (SH M3x6) screw. Use the indicated hole as shown.
- Thread the lower pivot ball of the assembled front shock onto the protruding screw at the front of the front lower arm.

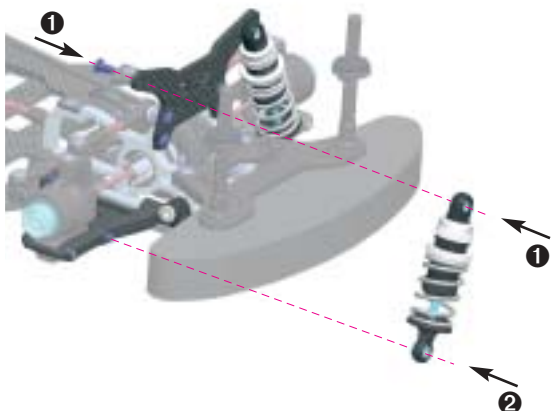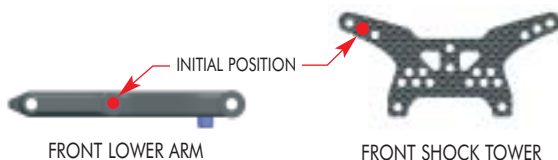

# 9. FINAL ASSEMBLY

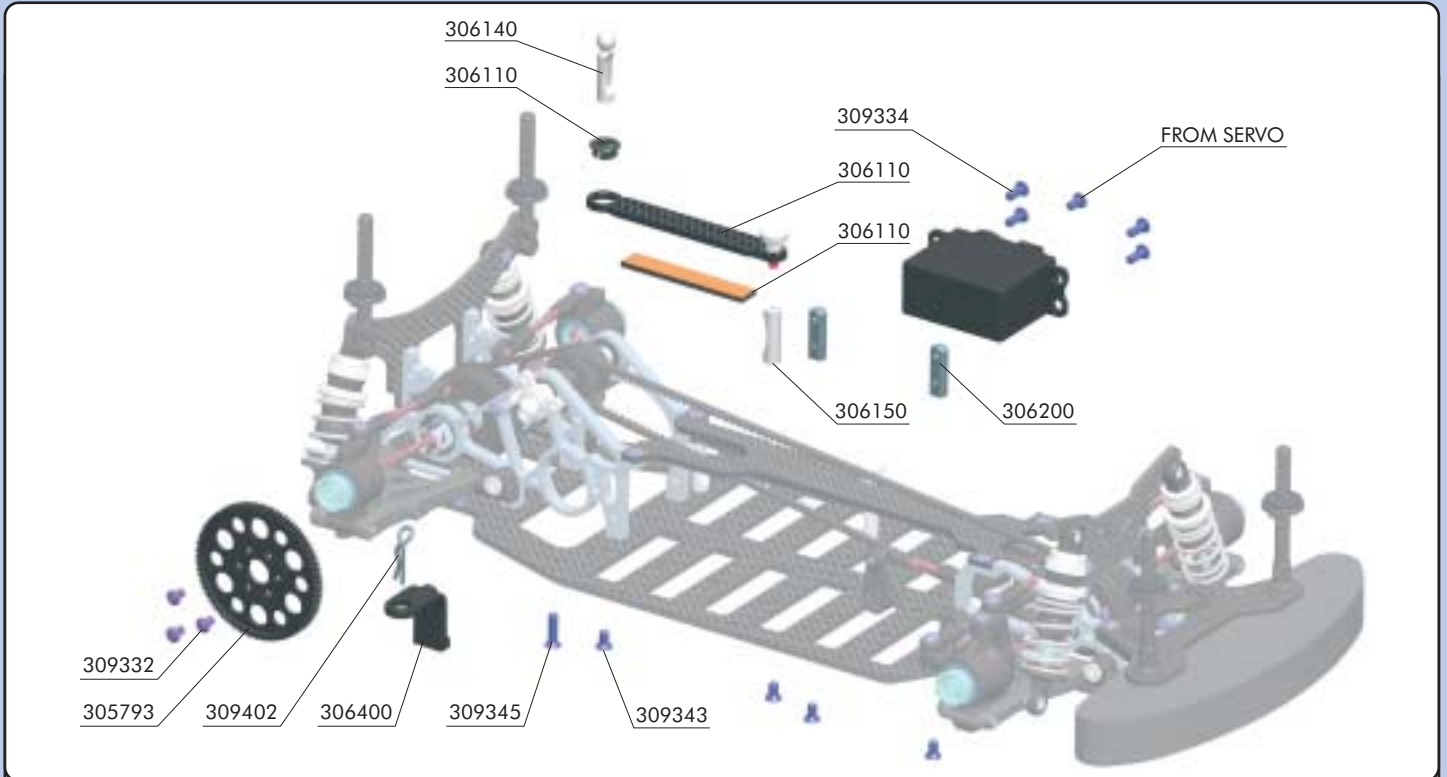

**BAG  
09**

30 5793 SPUR GEAR 93T / 48  
 30 6110 BATTERY MOUNT STRAP FOR 3 BATT. - SET  
 30 6140 BATTERY HOLDER MOUNT WITH BALL END (2)  
 30 6150 BATTERY HOLDER MOUNT WITH THREAD (2)  
 30 6200 ALU SERVO MOUNT (2)  
 30 6400 COMPOSITE TRANSPONDER MOUNT

30 9332 HEX SCREW SH M3x5 (10)  
 30 9334 HEX SCREW SH M3x8 (10)  
 30 9343 HEX SCREW SFH M3x6 (10)  
 30 9345 HEX SCREW SFH M3x10 (10)  
 30 9402 CLIP FOR TRANSPONDER (4)



**1.** Press a plastic hub into the large hole of each battery strap. Press the #306140 battery holder mount's ball end into the plastic hub; it will snap into place. Once installed, the ball end should pivot freely in all directions.

**2.** Mount the separate #306150 threaded battery holders to the chassis with #309343 (SFH M3x6) screws. Orient the mounts so the battery will fit in the cutout. Mount the ball-ended battery holder mounts (with battery straps) to the chassis with #309345 (SFH M3x10) screws. Orient the mounts so the battery will fit in the cutout.

Note: If there is a lot of play between the batteries and the battery strap, stick the foam battery cushion to the underside of the graphite battery strap.

**Repeat for the other battery holder.**


**3.** Mount the #306400 transponder mount to the chassis with a #309345 (SFH M3x10) screw.

**Before participating in a race event, review the rules to determine the accepted transponder mounting locations.**

**4.** Attach the servo to the #306200 servo mounts using four #309334 (SH M3x8) screws.

**5.** Attach the servo mounts to the chassis using two #309343 (SFH M3x6) screws.

**6.** Attach the servo horn to the servo using the screw that comes with the servo.

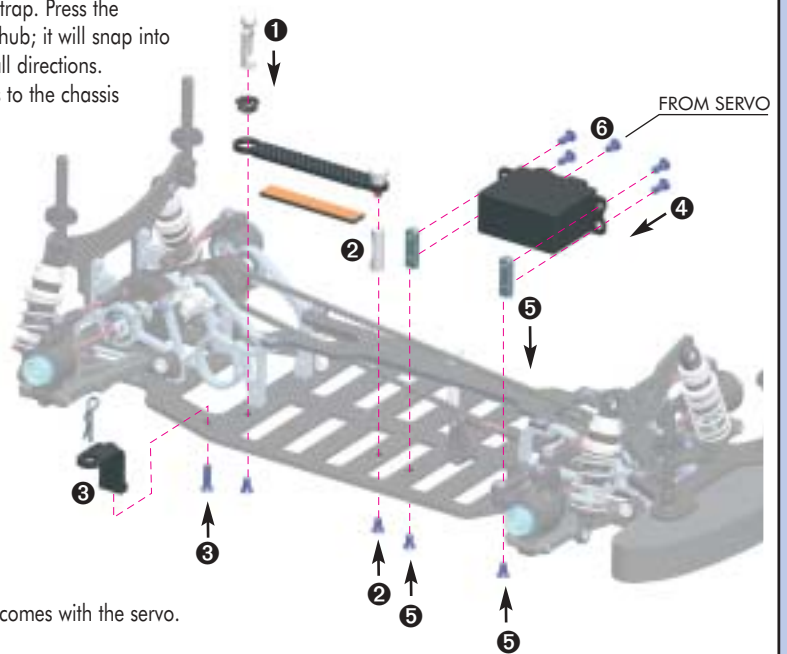


If the servo does not fit properly, you may have to add shims between the servo tabs and the mounting posts.




Mount the spur gear to the layshaft using three #309332 (SH M3x5) screws.



# ACCESSORY ASSEMBLY

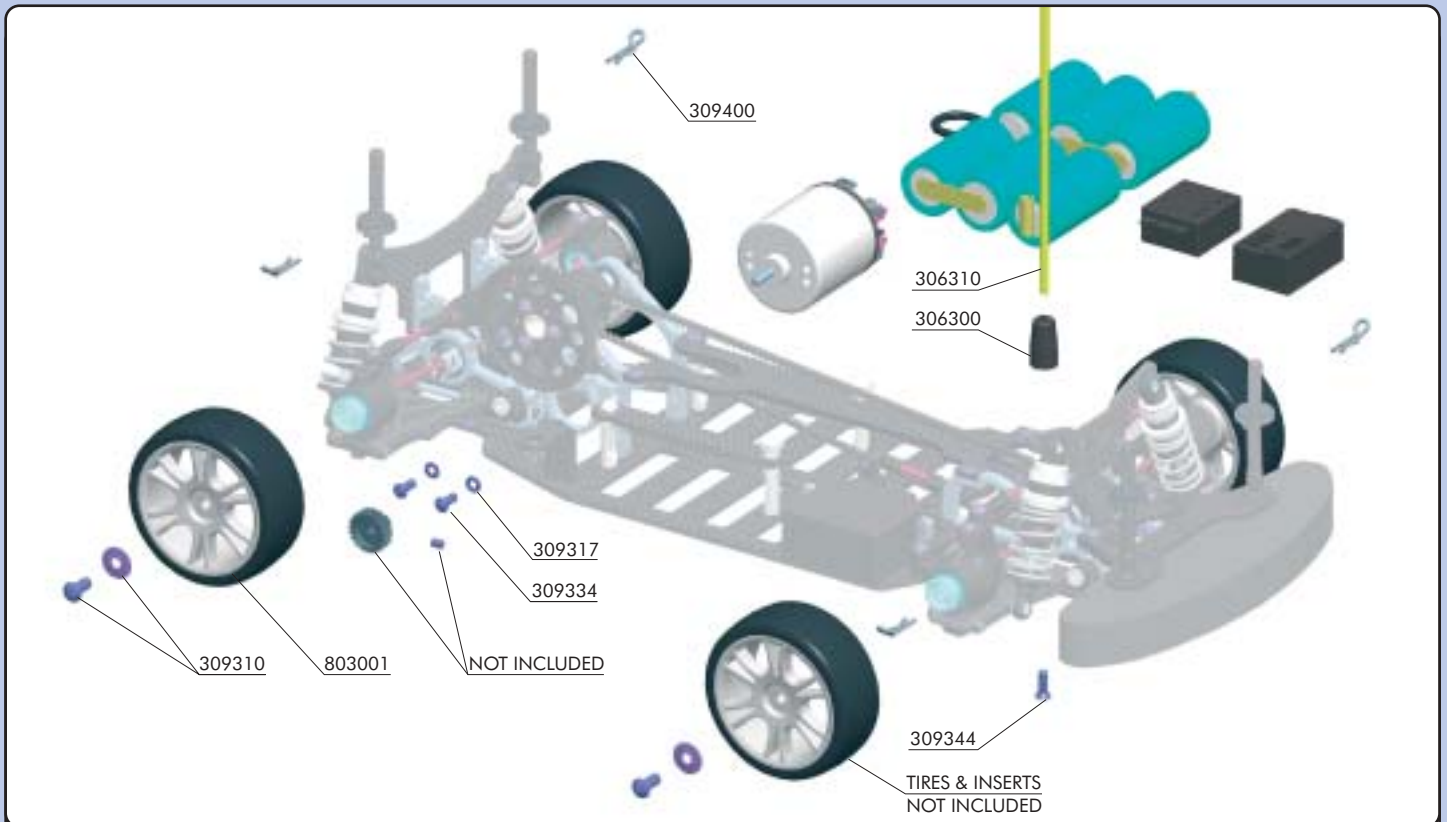

<b>BAG 09</b>	30 5720--34	PINION GEAR ALU HARD COATED 48T (OPTION)	30 9334	HEX SCREW SH M3x8 (10)
	30 6300	ANTENNA MOUNT	30 9344	HEX SCREW SFH M3x8 (10)
	30 6310	ANTENNA TUBE (2)	30 9400	BODY CLIP (8)
	30 9310	WHEEL MOUNTING HARDWARE (4+4)	80 3001	HUDY 24 MM WHEELS STARBURST - WHITE (4)
	30 9317	WASHER S 3.2 (10)		

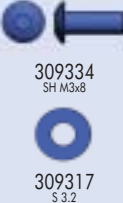


309334  
SH M3x8


309317  
S 3.2

1. Mount the pinion gear to the motor shaft and secure it with a #309350 (SB M3x3) set screw. Note that pinion gear is not included in the kit.
2. Mount the motor to the right rear bulkhead using two #309334 (SH M3x8) screws and #309317 (S 3.2) washers.

**Adjust the motor so the pinion meshes with the spur gear properly.**


**Make sure the gear mesh is not too tight.**  
There should be a small amount of play between the teeth of the pinion gear and the spur gear.

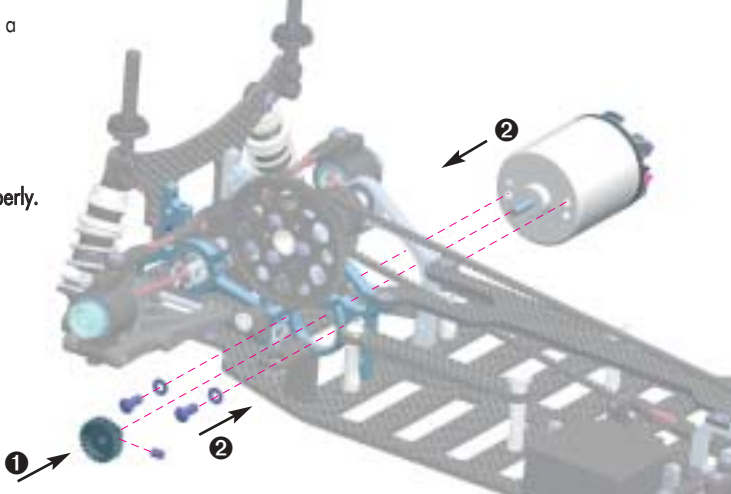



309344  
SFH M3x8

1. Mount the receiver and speed controller to the chassis using double-sided tape.
2. Mount the #306300 antenna holder to the chassis in an available position using a #309344 (SFH M3x8) screw.
3. Slide the receiver's antenna wire through the #306310 antenna tube, and then place the wire in the slot on the side of the antenna mount.
4. Push the base of the antenna tube firmly into the hole of the antenna mount, making sure you don't pinch or cut the receiver's antenna wire.

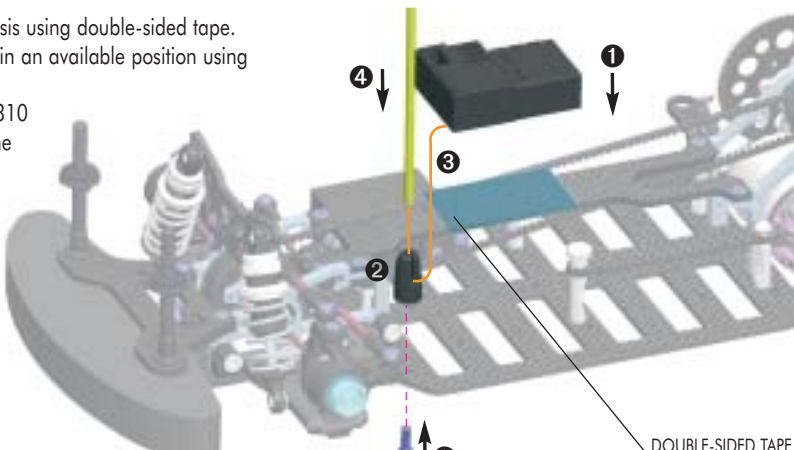

DOUBLE-SIDED TAPE

# ACCESSORY ASSEMBLY

The XRAY T1 Factory Kit is a competition racecar, and therefore does not come supplied with tires and inserts. Check with racers at tracks you attend to determine the best tire/insert combinations.

To install rubber tires and inserts on the supplied wheels, do the following:

1. Install a foam insert into each tire, making sure it is centered.
2. Slide the tire (with insert) onto the wheel.
3. Carefully glue the tires to the wheels with CA glue.

**WARNING:**

Follow the adhesive manufacturer's instructions for proper use and safety. Wear proper eye and hand protection.



309310  
SH M4x8





309310  
ST 4x12

1. Mount the wheels on the wheel axle hex hubs using #309310 (SH M4x8) screws and 309310 (ST 4x12) cone washers. Note the orientation of the cone washer in the detail image. Make sure the wheel screws are very tight, so the wheels do not loosen during racing.

This car is designed to use a 6-cell battery pack, configured into 3+3 saddlepacks.

2. Unthread the front thumbscrews on both graphite battery straps, and pivot the battery straps open.
3. Position the battery pack in the chassis cutouts.
4. Pivot the battery straps over the batteries, and thread the thumbscrews into the front mounting posts.

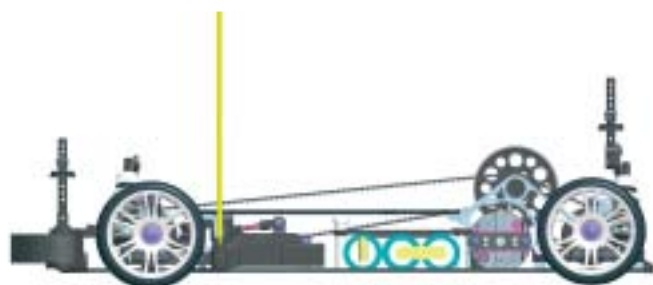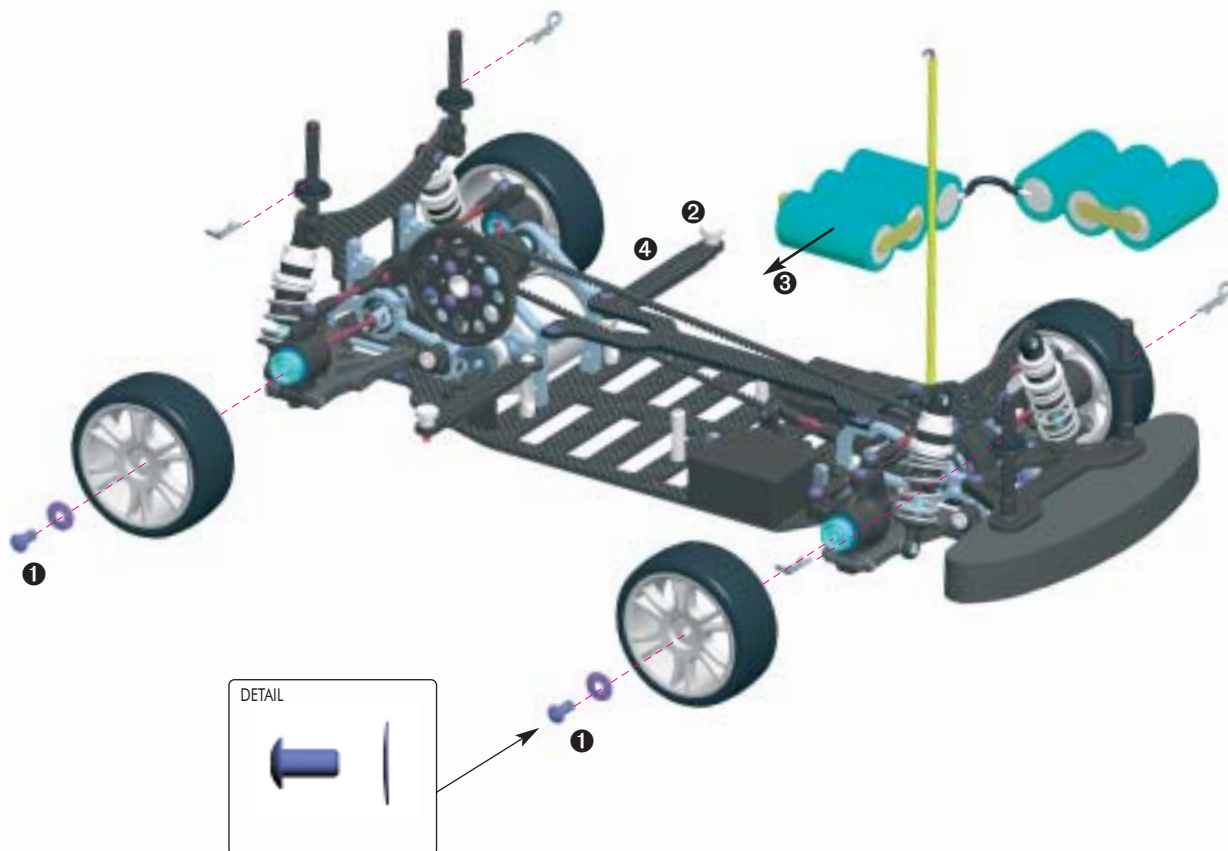

## IMPORTANT NOTES:

- This product is not suitable for children except under the direct supervision of an adult.
- Carefully read all manufacturers warnings and cautions for any parts used in the construction and use of your model.
- Assemble this kit only in places away from the reach of very small children.
- First-time builders should seek advice from people who have building experience in order to assemble the model correctly and to allow the model to reach its performance potential.
- Exercise care when using tools and sharp instruments.
- Take care when building; some parts may have sharp edges. Keep small parts out of reach of small children.
- Do not put fingers or any objects inside rotating or moving parts.
- Right after using your model, do NOT touch equipment on the model because they may generate high temperatures.
- Be sure that your operating frequency is clear before running and never share the same frequency with somebody else at the same time.
- Always turn on your transmitter before you turn on the receiver/speed controller or connect the battery pack. Always turn off the receiver/speed controller or disconnect the battery pack before turning your transmitter off.
- Disconnect the battery pack before storing your model.
- When learning to operate your model, go to an area that has no obstacles that can damage your model if you crash.
- Remove any sand, mud, dirt, grass or water before putting your model away.
- Use a recommended charger for the batteries and follow the instructions correctly. Over-charging, incorrect charging, or using inferior chargers can cause the batteries pack to become dangerously hot.
- Do not allow the transmitter batteries to run low, otherwise you risk losing control of the model.
- Regularly check the charger for potential hazards such as damage to the cable, plug, casing or other defects. Ensure that any damage is rectified before using the charger again.
- Do not allow any metal part to short circuit the batteries or speed controller.
- If the model behaves strangely, immediately stop the model and check and clear the problem.
- Do not stall the motor. The speed controller will fail within seconds if power is applied to the motor when the car cannot move.
- Do not use your model:
  - Near real cars, animals, or people that are unaware that an R/C car is being driven.
  - In places where children and people gather
  - In residential districts and parks
  - In limited indoor spaces
  - In wet conditions
  - In the street

**Take adequate safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation. Disregard of the any of the above cautions may lead to accidents, personal injury, or property damage. XRAY MODEL RACING CARS assumes no responsibility for any injury, damage, or misuse of this product during assembly or operation.**

